



Model PMD620 User guide addendum

Table of Contents

- 1. Menu Structure 1
- 2. Menu List 2
- 3. File List 3
- 4. Preset Menu 7
- 5. Display Menu..... 10
- 6. Utility Menu 11
- 7. Display 13


1. Menu Structure

The menu structure of the PMD620 has been upgraded. From the file list, you can play the file you have selected, check the parameters, rename the title or delete the file you don't need any more.

1 File List -----						1 Play
2 Presets -----	Preset 1 -----					1 Select
3 Display -----	01 Brightness	Preset 2	2 Edit -----	01 Input		2 Information
4 Time/Date	02 Font Size	Preset 3	3 Rename	02 Rec Format		3 Rename
5 Utility -----	1 Load Settings			03 Rec Channel		4 Delete
6 F/W Version	2 Save Settings			04 Sample Rate		
	3 Card Format			05 Level Cont.		
				06 Level LED		
				07 Manual Track		
				08 Auto Track		
				09 Silent Skip		
				10 Mic Atten.		
				11 Low Cut		
				12 Mic Power		
				13 Input Jack		
				14 Skip Back		
				15 Key Lock		
				16 Battery		
				17 Auto Power Off		
				18 Machine ID		
				19 Preset Default		

2. Menu List

Selection Items of the top menu have been changed. File List, Presets, Display, Time/Date, Utility, and F/W version are included.

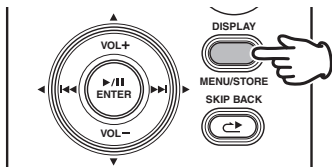

1. From Stop, press and hold the **DISPLAY** button for one second.



- Menu list appears in the display.
- The selected item is highlighted.

- When the first item is selected, press **VOL +** button to jump to the last item.
- When the last item is selected, press **VOL –** button to jump to the first item.

2. Press the **VOL +** or **VOL –** button to select the item.
3. Press the **▶/II/ENTER** button to confirm or execute the selected item.

Items and functions

#	Display	Description
1	File List	Browse audio files
2	Presets	Go to Preset menu
3	Display	Go to Display menu
4	Time/Date	Adjust current time and date
5	Utility	Go to Utility
6	F/W version	Display the firmware version

3. File List

File list displays a list of file titles, MP3 and WAV in 'MPGLANG1' folder. The selected file can be played, renamed and deleted. The file information can be displayed.

1. From Stop, press and hold the **DISPLAY** button for one second.
2. Press the **VOL +** or **VOL -** button to select "File List". Then press the **►/II/ENTER** button to accept.



- File list appears in the display.
- The selected item is highlighted.
- When the first item is selected, press **VOL +** button to jump to the last item.
- When the last item is selected, press **VOL -** button to jump to the first item.

3. Press the **VOL +** or **VOL -** button to select the file you want to access. Then press the **►/II/ENTER** button to enter the File list Menu.




- During File list menu mode, press the **STOP/CANCEL** button to return to Stop mode.
- Press the **◀◀** button to return to File list.

File list Functions


#	Display	Description
1	Play	Play the file
2	Information	Display information of the file
3	Rename	Rename the file title
4	Delete	Delete the file

Play

1. From Stop, press and hold the **DISPLAY** button for one second.

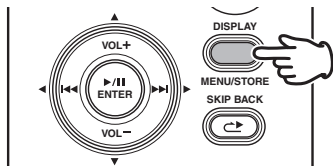


2. Press the **VOL +** or **VOL -** button to select “File List”. Then press the **▶/||/ENTER** button.
 - File list appears in the display.
 - Press the **STOP/CANCEL** button to return to Stop mode.
3. Press the **VOL +** or **VOL -** button to select the file you want to access. Then press the **▶/||/ENTER** button to enter the File list Menu.

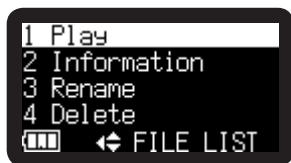

- Press the **◀◀** button to return to File list.
4. Press the **VOL +** or **VOL -** button to select “Play”. Then press the **▶/||/ENTER** button to start playback.
 - During playback, press the **STOP/CANCEL** button to return to File list.

Information


1. From Stop, press and hold the **DISPLAY** button for one second.

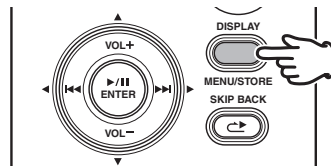

2. Press the **VOL +** or **VOL -** button to select “File List”. Then press the **▶/||/ENTER** button.
 - File list appears in the display.
 - Press the **STOP/CANCEL** button to return to Stop mode.
3. Press the **VOL +** or **VOL -** button to select the file. Then press the **▶/||/ENTER** button to enter the File list Menu.
 - Press the **◀◀** button to return to File list.
4. Press the **VOL +** or **VOL -** button to select “Information”. Then press the **▶/||/ENTER** button to display the information.
 - Press the **◀◀** button to return to the File list.
 - Press the **STOP/CANCEL** button to return to Stop mode.

File Rename

1. From Stop, press and hold the **DISPLAY** button for one second.

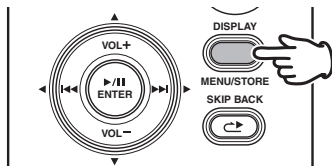

2. Press the **VOL +** or **VOL -** button to select “File List”. Then press the **►/II/ENTER** button.



- File list appears in the display.
- Press the **STOP/CANCEL** button to return to Stop mode.

3. Press the **VOL +** or **VOL -** button to select the file. Then press the **►/II/ENTER** button to enter the File list Menu.

- Press the **◀◀** button to return to the File list.
- Press the **STOP/CANCEL** button to return to Stop mode.

4. Press the **VOL +** or **VOL -** button to select “Rename”. Then press the **►/II/ENTER** button to access the rename window.



5. Rename the file title

Text can be inserted and deleted. Press the **◀◀** or **▶▶** button to move the cursor to the place you wish to insert text into or delete text from.

To insert text

Press the **VOL +** or **VOL -** button to select the character you want to insert. When the character that you want to insert is displayed, press the **►/II/ENTER** button to enter the character. The selected character for insertion is highlighted.

To delete text

Press the **SKIP BACK** button to delete the selected character.

6. Press the ►/II/ENTER button to enter the changes.

Notes:

- If there has been a file with the title changed with the ►/II/ENTER button exists, “Exist Title” is displayed for one second.
- If the last letter of the file title is Space(SP) character, the changed title does not include the last letter.
- Extensions are not displayed.
- If number of file title letter is more than 60, last letter is deleted when a new letter is added.
- The characters which you can insert are A B C D E F G H I J K L M N O P Q R S T U V W X Y Z a b c d e f g h i j k l m n o p q r s t u v w x y z (Space) ! “ # \$ % & ' () + , - . : ; = @] ^ _ ` { } ~ 0 1 2 3 4 5 6 7 8 9.

File Delete

1. From Stop, press and hold the **DISPLAY** button for one second.
2. Press the **VOL +** or **VOL –** button to select “File List”. Then press the ►/II/ENTER button.



- File list appears in the display.
 - Press the **STOP/CANCEL** button to return to Stop mode.
3. Press the **VOL +** or **VOL –** button to select the file you want to delete. Then press the ►/II/ENTER button to enter the File list Menu.
 - Press the ◀◀ button to return to the File list.
 - Press the **STOP/CANCEL** button to return to Stop mode.
 4. Press the **VOL +** or **VOL –** button to select “Delete”. Then press the ►/II/ENTER button. “File Delete?” message is displayed.
 - Press the **STOP/CANCEL** button to cancel a File Delete item and return to STOP.
 5. While “File Delete?” message is displayed, select “Yes” and press the ►/II/ENTER button to delete the selected file. While deleting “Executing...” is displayed. “Completed” is displayed for one second.

4. Preset Menu

You can store to 3 detailed presets on the recorder for such settings as recording input, recording format, playback mode, etc. There are 18 setting items in the preset menu, and 3 presets can be set with the desired conditions.

Preset Select allows you to select a preset number.

1. From Stop, press and hold the **DISPLAY** button for one second.
2. Press the **VOL+** or **VOL -** button to select “Presets”. Then press the **►/II/ENTER** button.



3. Press the **VOL +** or **VOL -** button to select Preset 1, 2, 3 or renamed Preset.

4. Press the **►/II/ENTER** button to accept the selected Preset.



- Action Menu appears in the display.
- Select “Select” item and press the **►/II/ENTER** button to store the settings of the selected preset.
- Select “Edit” item and press the **►/II/ENTER** button to set or change the selected preset.
- Select “Rename” item and press the **►/II/ENTER** button to change the name of the selected preset.

Action Menu Functions

#	Display	Description
1	Select	Store the selected preset
2	Edit	Set or change the selected preset
3	Rename	Change the title of the selected preset

Preset Rename

1. From Stop, press and hold the **DISPLAY** button for one second.
2. Press the **VOL +** or **VOL –** button to select Preset Menu. Then press the **►/II/ENTER** button to accept.
3. Press the **VOL +** or **VOL –** button to select Preset 1, 2, 3 or renamed Preset.
Then press the **►/II/ENTER** button to accept the selected Preset.
4. Press the **VOL +** or **VOL –** button to select “Rename” and press the **►/II/ENTER** button to accept.



5. Rename the preset title

Text can be inserted and deleted. Press the **◀◀** or **▶▶** button to move the cursor to the place you wish to insert text into or delete text from.

To insert text

Press the **VOL +** or **VOL –** button to select the character you want to insert. When the character that you want to insert is displayed, press the **►/II/ENTER** button to enter the character. The selected character for insertion is highlighted.

To delete text

Press the **SKIP BACK** button to delete the selected character.

6. Press the **DISPLAY** button to store the changes.

Notes:

- If there has been a preset with the title changed with the **DISPLAY** button exists, “Exist Title” is displayed for one second.
- If the last letter of the preset title is Space(SP) character, the changed title does not include the last letter.
- The maximum length of a preset title is limited to 8 letters. When the 9th letter is inserted the last letter is deleted.
- The characters which you can insert are A B C D E F G H I J K L M N O P Q R S T U V W X Y Z a b c d e f g h i j k l m n o p q r s t u v w x y z (Space) ! “ # \$ % & ' () + , - . : ; = @] ^ _ ` { } ~ 0 1 2 3 4 5 6 7 8 9.

Table of Preset

Order	Display	Settings	Default		
			Preset 1	Preset 2	Preset 3
1	Input	Auto/ INT MIC/ MIC/ LINE	Auto	Auto	Auto
2	Rec Format	MP3-H/ MP3-M/ MP3-L/ PCM-16/ PCM-24	MP3-M	MP3-H	PCM-24
3	Rec Channel	Stereo/ Mono	Stereo	Stereo	Stereo
4	Sample Rate	44.1k/ 48k	44.1k	44.1k	48k
5	Level Cont.	Manual / ALC	ALC	Manual	Manual
6	Level LED	−54dB/ −38dB/ −20dB/ −12dB/ −6dB	−12dB	−6dB	−6dB
7	Manual Track	On / Off	On	On	On
8	Auto Track	Off/ 1min/ 5min/ 10min/ 15min/ 30min/ 1hour/ 2hour/ 6hour/ 8hour/ 12hour/ 24hour	Off	Off	Off
9	Silent Skip	Off / −60dB / −54dB / −38dB / −20dB	Off	Off	Off
10	Mic Atten.	0dB/ −12dB/ −24dB	0dB	0dB	0dB
11	Low Cut	On/ Off	Off	Off	Off
12	Mic Power	On/ Off	Off	Off	Off
13	Input Jack	Stereo/ Mono	Stereo	Stereo	Stereo
14	Skip Back	0.5sec/ 1sec/ 1.5sec/ 2sec/ 2.5sec/ 3sec/ 3.5sec/ 4sec/ 4.5sec/ 5sec/ 5.5sec/ 6sec/ 6.5sec/ 7sec/ 7.5sec/ 8sec/ 8.5sec/ 9sec/ 9.5sec/ 10sec/ 15sec/ 20sec/ 25sec/ 30sec/ 35sec/ 40sec/ 45sec/ 50sec/ 55sec/ 60sec	3sec	3sec	3sec
15	Key Lock	All/ Partial	All	All	All
16	Battery	Alkaline/ Ni-MH	Alkaline	Alkaline	Alkaline
17	Auto PowerOff	On/ Off	On	On	On
18	Machine ID	Max 8 letters	1	1	1
19	Preset Default	–	–	–	–

5. Display Menu

You can store presets on the display menu for such settings as brightness, Font size, LED, Time form etc.

1. From Stop, press and hold the **DISPLAY** button for one second.



- Menu list appears in the display.
 - The selected item is highlighted.
 - When the first item is selected, press **VOL +** button to jump to the last item.
 - When the last item is selected, press **VOL –** button to jump to the first item.
2. Press the **VOL +** or **VOL –** button to select “Display”. Then press the **►/II/ENTER** button.
 - The number of a selected item blinks.
 - The choice of the selected item is highlighted.
 - During Display menu mode, press the **STOP/CANCEL** button to return to Stop mode.

3. Press the **VOL +** or **VOL –** button to select an item. Then press the **◀◀** or **▶▶** button to tab through the choices.
4. Press the **VOL +** or **VOL –** button to select other Menu choices. When changing the Display menu is complete, press the **DISPLAY** button to store the changes, or press the **STOP/CANCEL** button to exit Menu mode without storing any changes.

Display Menu Functions

#	Display	Selection items	Default
1	Brightness	1 to 10	5
2	Font Size	Large/ Small	Small
3	LED	On/ Off	On
4	Time Form	12H/ 24H	12H
5	Date Form	M/D/Y / D/M/Y	M/D/Y
6	FileSort	Alphabet/ Time/Date	Time/Date
7	Default	–	–

6. Utility Menu

Utility menu lets you load settings, save settings and format the SD card.

1. From Stop, press and hold the **DISPLAY** button for one second.
2. Press the **VOL +** or **VOL –** button to select “Utility”.
Then press the **►/II/ENTER** button to accept.



3. Press the **VOL +** or **VOL –** button to select the item you want to access.
4. Press the **►/II/ENTER** button.
 - Press the **STOP/CANCEL** button to cancel and return to Stop mode.
5. While message is displayed, select “Yes” to execute.
It displays “Executing...”. After the file load is completed, “Completed” is displayed for one second and returns to Stop mode.

Utility Functions

#	Display	Descriptions
1	Load Settings	Load setting data from SD card.
2	Save Settings	Save setting data to SD card.
3	Card Format	Delete all files.

File format of the 620preset.txt

Item	Separator	Set value	Break
[Preset-1]		Fixed value	0D0Ah
Name	=		0D0Ah
Input	=		0D0Ah
:	:	:	:
Auto Power Off	=		0D0A0D0A h
[Preset-2]		Fixed value	0D0Ah
Name			0D0Ah
Input	=		0D0Ah
:	:	:	:
Auto Power Off	=		0D0A0D0A h
[Preset-3]		Fixed value	0D0Ah
Name			0D0Ah
Input	=		0D0Ah
:	:	:	:
Auto Power Off	=		0D0A0D0A h
[Display]		Fixed value	0D0Ah
Brightness			0D0Ah
:	:	:	:
File Sort			0D0A0D0A h
[Common]		Fixed value	0D0Ah
Machine ID	=		0D0Ah
Version	=		0D0Ah

[Preset-1]
 Name=Preset-1
 Input=Auto
 :
 Auto Power Off=On

[Preset-2]
 Name=Preset-2
 Input=Auto
 :
 Auto Power Off=On

[Preset-3]
 Name=Preset-3
 Input=Auto
 :
 Auto Power Off=On

[Display]
 Brightness=5
 :
 File Sort=Time/Date


[Common]
 Machine ID=1
 Version=A-2.06 or later

Note:

- The PMD620 cannot read an old file, 620preset.cfg.

7. Display

Press the **DISPLAY** button to alternate information displays. Displays are slightly different in Stop, Record and Playback mode.

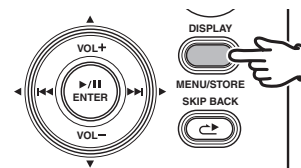

During Stop mode:

① Total Remain



② Current Time/Date



③ Record Setup



① Total Remain (Default display)



- If "Date Form" setting in preset menu is M/D/Y, the date field shows MMMDD/YYYY. If "Date Form" setting is D/M/Y, the date field shows DDMMM/YYYY. (P.10)



- The MP3 bitrate is disappeared if the "Rec Format" setting is PCM.
- The ALC icon is disappeared if the "Level Cont." setting is Manual.
- The AUTO TRK icon is disappeared if the "Auto Track" setting is Off.

During Record mode:

① Record Time



② Total remain time




③ Record Setup



④ Record Level



① Record Time (Default display)

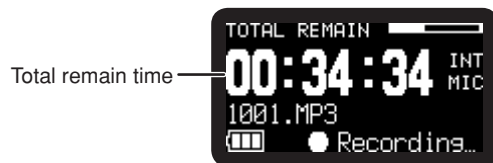

- The MP3 bitrate is disappeared if the "Rec Format" setting is PCM.
- The ALC icon is disappeared if the "Level Cont." setting is Manual.
- The AUTO TRK icon is disappeared if the "Auto Track" setting is Off.



D&M Holdings Inc.
PROFESSIONAL BUSINESS COMPANY

2008/05 ecmn-d