
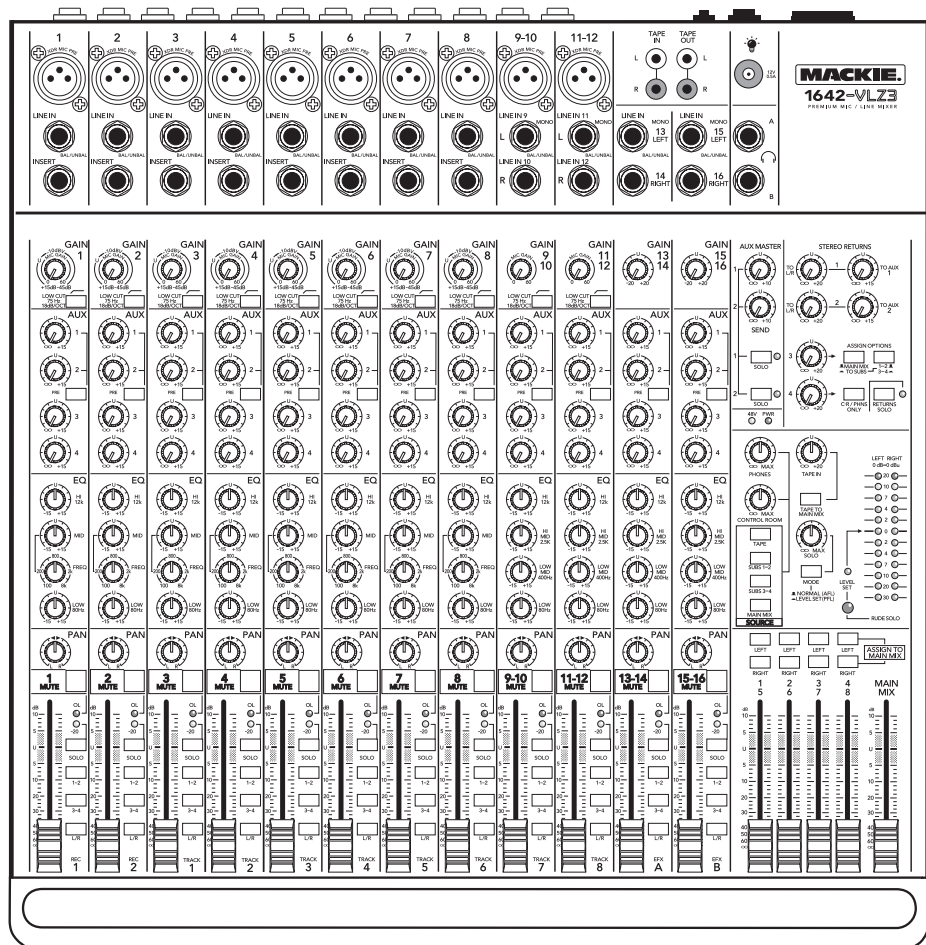


1642-VLZ3

16-Channel Mic/Line Mixer

OWNER'S MANUAL

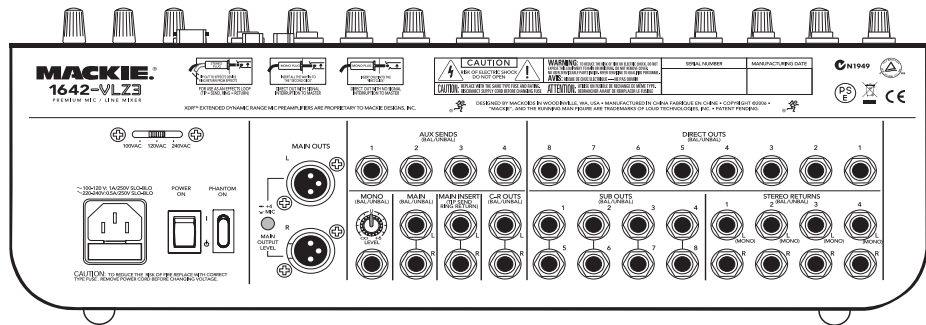

MACKIE®

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This apparatus shall not be exposed to dripping or splashing, and no object filled with liquids, such as vases or beer glasses, shall be placed on the apparatus.
16. This apparatus has been designed with Class-I construction and must be connected to a mains socket outlet with a protective earthing connection (the third grounding prong).
17. This apparatus has been equipped with an all-pole, rocker-style AC mains power switch. This switch is located on the rear panel and should remain readily accessible to the user.
18. This apparatus does not exceed the Class A/Class B (whichever is applicable) limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of the Canadian Department of Communications.

ATTENTION — *Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de class A/de class B (selon le cas) prescrites dans le règlement sur le brouillage radioélectrique édicté par les ministere des communications du Canada.*

19. Exposure to extremely high noise levels may cause permanent hearing loss. Individuals vary considerably in susceptibility to noise-induced hearing loss, but nearly everyone will lose some hearing if exposed to sufficiently intense noise for a period of time. The U.S. Government's Occupational Safety and Health Administration (OSHA) has specified the permissible noise level exposures shown in the following chart.

According to OSHA, any exposure in excess of these permissible limits could result in some hearing loss. To ensure against potentially dangerous exposure to high sound pressure levels, it is recommended that all persons exposed to equipment capable of producing high sound pressure levels use hearing protectors while the equipment is in operation. Ear plugs or protectors in the ear canals or over the ears must be worn when operating the equipment in order to prevent permanent hearing loss if exposure is in excess of the limits set forth here.

PORTABLE CART WARNING



Carts and stands - The Component should be used only with a cart or stand that is recommended by the manufacturer. A Component and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the Component and cart combination to overturn.

| ⚡ | CAUTION AVIS | ! |
|--|---------------------|---|
| RISK OF ELECTRIC SHOCK DO NOT OPEN RISQUE DE CHOC ELECTRIQUE NE PAS OUVRIR | | |
| CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED PERSONNEL ATTENTION: POUR EVITER LES RISQUES DE CHOC ELECTRIQUE, NE PAS ENLEVER LE COUVERCLE. AUCUN ENTRETIEN DE PIECES INTERIEURES PAR L'USAGER. CONFIER L'ENTRETIEN AU PERSONNEL QUALIFIE. AVIS: POUR EVITER LES RISQUES D'INCENDIE OU D'ELECTROCUTION, N'EXPOSEZ PAS CET ARTICLE A LA PLUIE OU A L'HUMIDITE | | |



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Le symbole éclair avec point de flèche à l'intérieur d'un triangle équilatéral est utilisé pour alerter l'utilisateur de la présence à l'intérieur du coffret de "voltage dangereux" non isolé d'ampleur suffisante pour constituer un risque d'électrocution.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Le point d'exclamation à l'intérieur d'un triangle équilatéral est employé pour alerter les utilisateurs de la présence d'instructions importantes pour le fonctionnement et l'entretien (service) dans le livret d'instruction accompagnant l'appareil.

| Duration Per Day In Hours | Sound Level dBA, Slow Response | Typical Example |
|------------------------------|-----------------------------------|---|
| 8 | 90 | Duo in small club |
| 6 | 92 | |
| 4 | 95 | Subway Train |
| 3 | 97 | |
| 2 | 100 | Very loud classical music |
| 1.5 | 102 | |
| 1 | 105 | Dave screaming at Steve about deadlines |
| 0.5 | 110 | |
| 0.25 or less | 115 | Loudest parts at a rock concert |

WARNING — To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.



Read This Page!



We realize that you must have a powerful hankerin' to try out your new 1642-VLZ3. Or you might be one of those people who never reads manuals. All we ask is that you read this page NOW, and read the rest later— you'll be glad you did.



WARNING: Before you plug the AC power cord into the mixer, make sure the VOLTAGE SELECTOR switch is set to the same voltage as your local AC mains supply (see page 13).

Level-Setting Procedure

Message to seasoned pros: do NOT set levels using the old “Turn the trim up until the clip light comes on, then back off a hair” trick. When a Mackie mixer clip light comes on, you really are about to clip.

This procedure really works — it assures low noise and high headroom. Please read on.

It's not even necessary to hear what you're doing to set optimal levels. But if you'd like to: Plug headphones into the PHONES output jack, then set the PHONES knob about one-quarter of the way up.

The following steps must be performed one channel at a time:

1. Turn the GAIN, AUX send and fader controls fully down.
2. Be sure the 1–2, 3–4 and L/R channel assignment switches are all disengaged.
3. Set the EQ knobs at the center detents.
4. Connect the signal source to the MIC or LINE channel input.
5. Engage (push in) the channel's SOLO switch.
6. Push in the MODE switch in the output section (LEVEL SET (PFL) mode) — the LEVEL SET LED will light.
7. Play something into the selected input, at real-world levels.
8. Adjust the GAIN control so that the display on the meter stays around “0.” (Only the left meter is active in the Level-Setting Procedure.)
9. If you'd like to apply some EQ, do so now and return to the previous step.
10. Disengage that channel's SOLO switch.
11. Repeat for each channel.

Other Nuggets of Wisdom

For optimum sonic performance, the channel faders and the MAIN MIX fader should be set near the “U” (unity gain) markings.

Always turn down the MAIN MIX fader and CONTROL ROOM and PHONES knobs before making connections to your 1642-VLZ3, or turning PHANTOM POWER on.

If you shut down your equipment, turn off your amplifiers first. When powering up, turn them on last.

Save the shipping box! You may need it someday.

Instant Mixing

Here's how to get going right away, using a microphone and a keyboard:

1. Plug your microphone into Channel 1's MIC input.
2. Turn on the 1642-VLZ3.
3. Perform the Level-Setting Procedure.
4. Connect cords from the MAIN OUT jacks to your amplifier.
5. Hook up speakers to the amp and turn it on.
6. Set channel 1's fader to the “U” mark.
7. Engage (push in) Channel 1's L/R switch.
8. Set the MAIN MIX fader one-quarter of the way up.
9. Sing like a canary!
10. Plug your keyboard into channels 3 and 4.
11. Turn channel 3's PAN knob fully left and channel 4's PAN knob fully right.
12. Set those faders to the “U” mark.
13. Perform the Level-Setting Procedure.
14. Engage the L/R switch on these channels.
15. Play like a madman and sing like a canary!

Please write your serial number here for future reference (i.e., insurance claims, tech support, return authorization, make dad proud, etc.)

Purchased at:

Date of purchase:

Part No. 0019817 Rev. D
 ©2007 LOUD Technologies Inc. All Rights Reserved. Printed in China.
 Are your teeth really so-brilliantly-white that you can't stand it? Do the popular kids all giggle as you walk past on the beach? Me too. Ever thought about a career as a technical writer?

Introduction

Thank you for choosing a Mackie professional compact mixer. The 1642-VLZ3 is equipped with our precision-engineered XDR2™ Extended Dynamic Range premium studio-grade mic preamps

Now that you have your 1642-VLZ3, find out how to get the most from it. That's where this manual comes in.

How To Use This Manual

Since many of you folks will want to hook up your 1642-VLZ3 immediately, the first pages you will encounter after the table of contents are the ever-popular hookup diagrams. These show typical mixer setups for Recording and Stereo PA. After this section is a detailed tour of the entire mixer.

Every feature of the 1642-VLZ3 is described “geographically;” in other words, in order of where it is physically placed on the mixer’s top or rear panel. These descriptions are divided into the first three sections, just as your mixer is organized into three distinct zones:

Patchbay: The patchbay along the top and back, where you connect things.

Channel Strip: The channel strips on the left where you adjust each channel.

Output Section: The output section on the right.

Throughout these chapters you’ll find illustrations, with each feature numbered. If you’re curious about a feature, simply locate it on the appropriate illustration, notice the number attached to it, and find that number in the nearby paragraphs.



This icon marks information that is critically important or unique to the 1642-VLZ3. For your own good, read them and remember them. They will be on the final test.



This icon will lead you to in-depth explanations of features and practical tips. While not mandatory, they usually have some valuable nuggets of information.

Appendix A is a section on troubleshooting and repair information.

Appendix B is a section on connectors: XLR connectors, TRS balanced connectors, TS unbalanced connectors, and Insert connectors.

Appendix C shows the technical specifications, and a block diagram showing the internal signal path and general goings-on within the mixer.

Need help with your new mixer?

- **Visit www.mackie.com and click Support to find: FAQs (Frequently Asked Questions), manuals, addendums, and user forums.**
- **Email us at: techmail@mackie.com.**
- **Telephone 1-800-898-3211 to speak with one of our splendid technical support chaps, (Monday through Friday, from 7 a.m. to 5 p.m. PST).**

Contents

IMPORTANT SAFETY INSTRUCTIONS 2
 INTRODUCTION 4
 HOOKUP DIAGRAMS..... 6

PATCHBAY DESCRIPTION

E-Z INTERFACING 8
 MIC AND LINE INPUT FLEXIBILITY 8
 1. MIC INPUTS 8
 PHANTOM POWER 8
 2. LINE INPUTS 9
 3. GAIN 9
 4. INSERT 9
 5. DIRECT OUT (ON REAR PANEL) 10
 RECORDING 10
 DOUBLE BUSING 10
 6. AUX SEND OUTPUTS 11
 EFFECTS: SERIAL OR PARALLEL? 11
 7. STEREO RETURN INPUTS 11
 8. SUB OUTS 11
 9. CONTROL ROOM OUTPUTS..... 11
 10. PHONES OUTPUTS..... 11
 11. TAPE OUTPUT 12
 12. TAPE INPUT 12
 13. MAIN INSERT 12
 14. MAIN OUTS 12
 15. MONO OUTPUT..... 12
 16. MONO LEVEL 13
 17. VOLTAGE SELECTOR..... 13
 18. POWER CONNECTION..... 13
 19. FUSE..... 13
 20. POWER SWITCH..... 13
 21. POWER LED 13
 22. PHANTOM SWITCH 13
 23. 48V LED 13
 24. BNC LAMP SOCKET..... 13

CHANNEL STRIP DESCRIPTION


25. CHANNEL FADER 14
 26. ASSIGN (1–2, 3–4, L/R) 14
 27. SOLO 14
 28. –20 (SOLO) LED 15
 29. OL (MUTE) LED 15
 30. MUTE 15
 31. PAN..... 15
 STEREO SOURCES 15
 CONSTANT LOUDNESS !!! 16
 32. 3-BAND MID-SWEEP EQ 16
 33. 4-BAND FIXED-FREQUENCY EQ 17
 34. LOW CUT 17
 35. AUX 1, 2, 3, & 4 17
 36. PRE 17

OUTPUT SECTION DESCRIPTION


37. MAIN MIX FADER 18
 38. SUBGROUP FADERS 18
 39. ASSIGN TO MAIN MIX..... 18
 40. TAPE IN (LEVEL) 19
 41. TAPE TO MAIN MIX..... 19
 42. CONTROL ROOM SOURCE 19
 43. CONTROL ROOM AND PHONES..... 19
 44. MODE (SOLO AFL/PFL)..... 20
 45. LEVEL SET LED 20
 46. SOLO (LEVEL)..... 20
 47. RUDE SOLO LIGHT 20
 48. METERS 20
 METERS VS. REALITY..... 21
 AUX DISCUSSION..... 21
 49. AUX SENDS (MASTER)..... 21
 50. AUX SENDS SOLO AND LED..... 22
 51. STEREO RETURNS (LEVEL)..... 22
 52. TO AUX 1 AND TO AUX 2..... 22
 53. MAIN MIX TO SUBS (FOR RETURN 3)..... 22
 54. 1–2/3–4 (FOR RETURN 3)..... 22
 55. C-R/PHNS ONLY (FOR RETURN 4) 23
 56. RETURNS SOLO 23

APPENDIX A: SERVICE INFORMATION 24
 APPENDIX B: CONNECTIONS..... 25
 APPENDIX C: TECHNICAL INFORMATION 28
 SPECIFICATIONS 28
 BLOCK DIAGRAM..... 29
 TRACK SHEET..... 30
 1642-VLZ3 LIMITED WARRANTY..... 31

HOOKUP DIAGRAMS

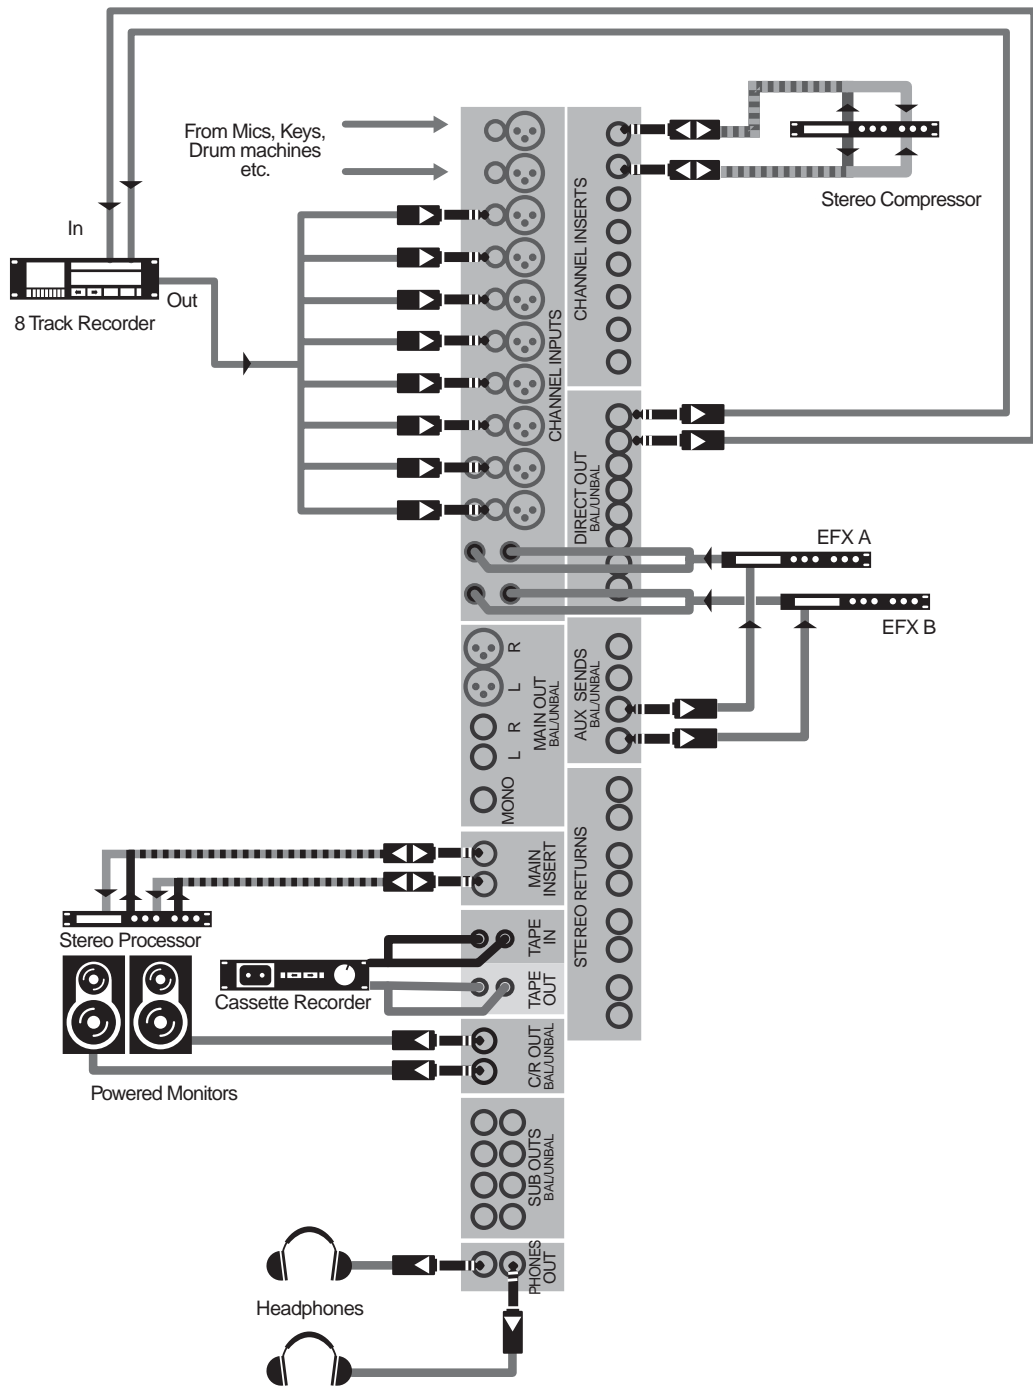


Recording System

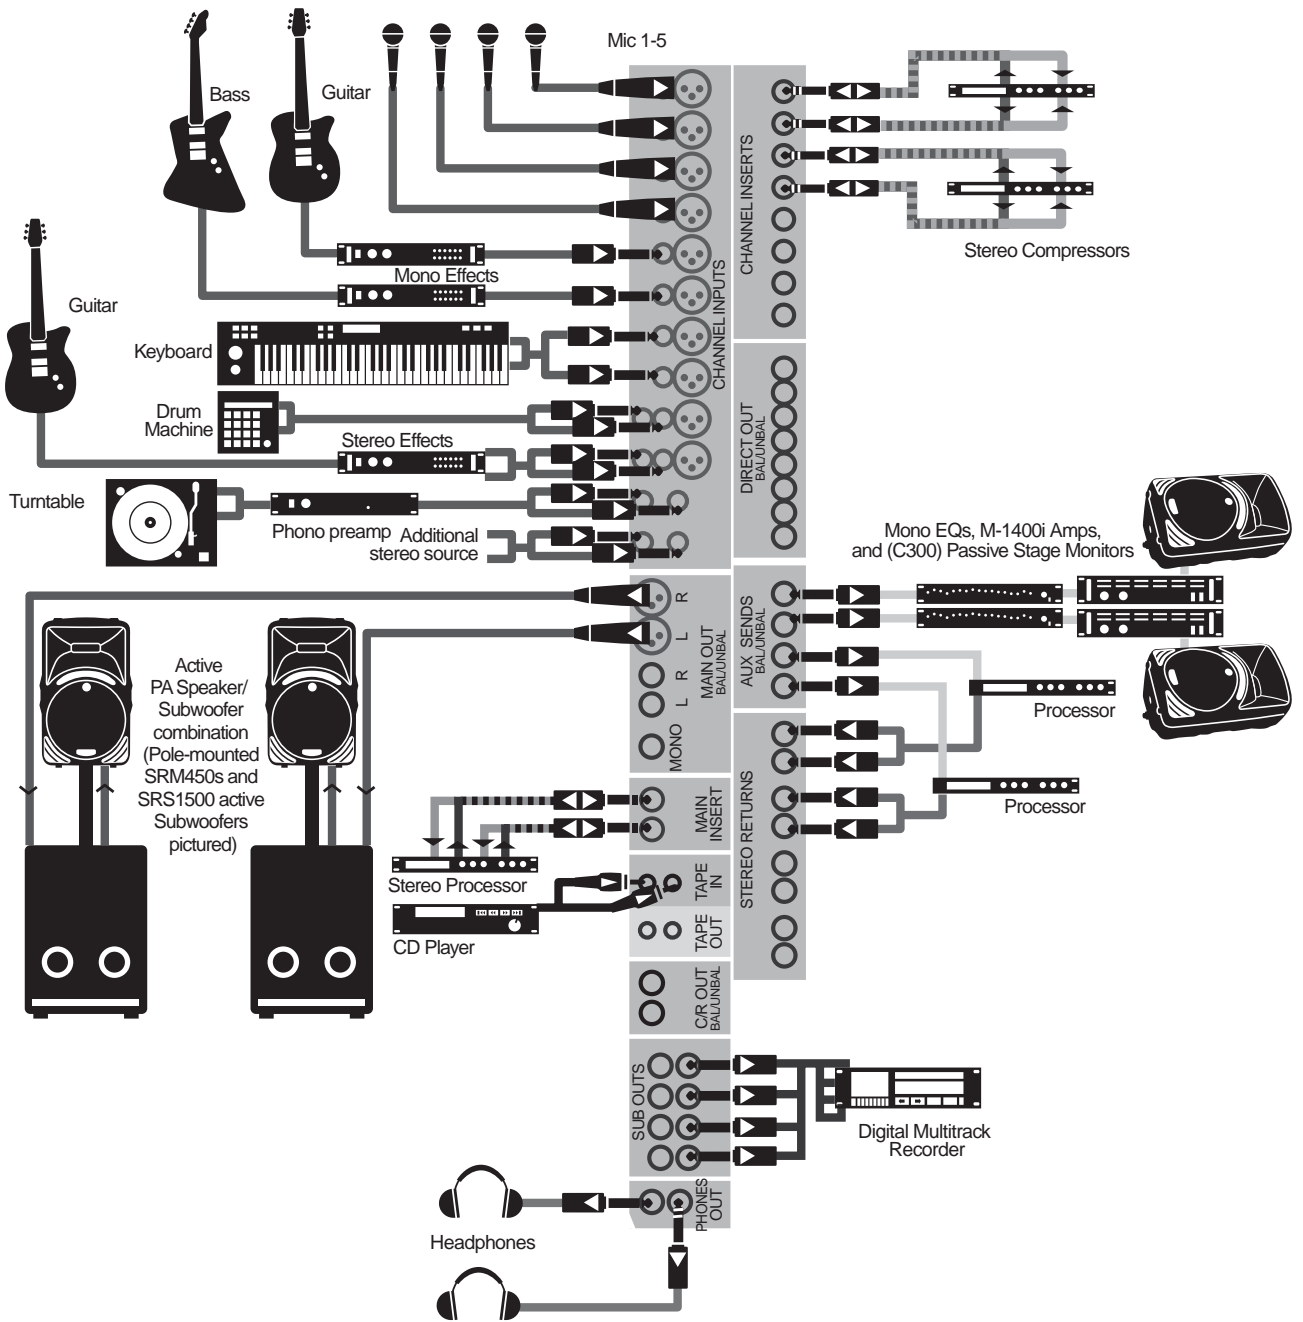

Live Stereo PA System

Patchbay Description

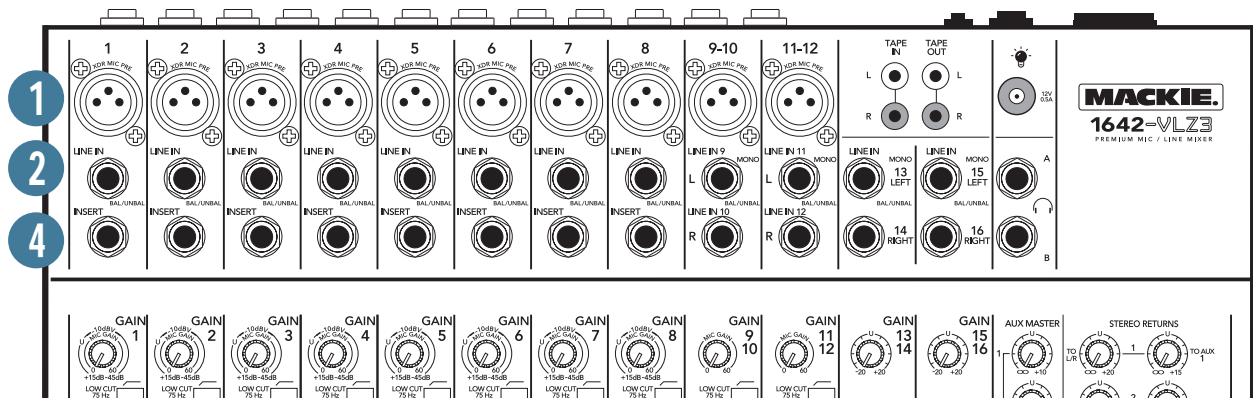

At the risk of stating the obvious, this is where you plug everything in: microphones, line-level instruments and effects, and the ultimate destination for your sound: a tape recorder, PA system, etc. Many of the features described in this section are on top of the mixer, but some are on the rear panel.

See Appendix B for further details and drawings of the connectors you can use with the 1642-VLZ3. Also see the Channel Strip description on page 14 for details of the signal routing from the XLR and Line inputs.



E-Z INTERFACING

Concerned about levels, balancing, impedances, polarity, or other interface goblins? Don't be. On your 1642-VLZ3, you can patch anything almost anywhere, with nary a care. Here's why:

- Every input and output is balanced (except inserts, phones and RCA jacks).
- Every input and output will also accept unbalanced lines (except XLR jacks).
- Every input is designed to accept virtually any output impedance.
- The main left and right mix outputs can deliver 28 dBu into as low as a 600 ohm load.
- All the other outputs can deliver 22 dBu into as low as a 600 ohm load.
- All the outputs are in phase with the inputs.

All we ask is that you perform the Level-Setting Procedure on page 3, every time you patch in a new sound source. So stop worrying and start mixing!

MIC AND LINE INPUT FLEXIBILITY

Channels 1-8 are mono channels with MIC [1] and LINE [2] inputs, featuring our XDR2 Extended Dynamic Range mic preamp circuitry. Channels 9-10 and 11-12 are stereo pairs with left and right LINE inputs and a single MIC input feeding each pair. Channels 13-14 and 15-16 are stereo pairs with LINE inputs only.

1. MIC INPUTS

We use phantom-powered, balanced microphone inputs just like the big studio mega- consoles, for exactly the same reason: This kind of circuit is excellent at rejecting hum and noise. You can plug in almost any kind of mic that has a standard XLR-type male mic connector. Always be sure to perform the Level-Setting Procedure. If you wire your own connectors, make them like this:

- Pin 1 = ground or shield
- Pin 2 = positive (+ or hot)
- Pin 3 = negative (– or cold)

Professional ribbon, dynamic, and condenser mics will all sound excellent through these inputs. The 1642-VLZ3's mic inputs will handle almost any kind of mic level you can toss at them, without overloading.

Not every instrument is made to connect directly to a mixer. Guitars commonly need a Direct Injection (DI) box to connect to the mixer's MIC inputs. These boxes convert unbalanced line-level signals from your guitar, into balanced mic-level outputs, and provide signal and impedance matching. They also let you send your gifted guitar renditions over long cables or audio snakes, with minimum interference and high-frequency signal loss. Ask your dealer or guitar maker about their recommendations for a good DI box.

PHANTOM POWER

Most condenser mics require phantom power, where the mixer sends low-current DC voltage to the mic's electronics through the same wires that carry audio. The 1642-VLZ3's phantom power is globally controlled by the PHANTOM [22] switch on the rear panel.

Semipro condenser mics often have batteries to accomplish the same thing. "Phantom" owes its name to an ability to be "unseen" by dynamic mics (Shure® SM57/ SM58, for instance) that don't need external power and aren't affected by it.



Unless you know for certain it is safe to do so, never plug single-ended (unbalanced) microphones, instruments, ribbon mics, or electronic devices into the MIC [1] input jacks if the phantom power is on.

2. LINE INPUTS

These 1/4" jacks share circuitry (but not phantom power) with the mic preamps. You can use these inputs for virtually any signal you'll come across, from instrument levels as low as -50 dB to operating levels of -10 dBV to +4 dBu, as there is 45 dB of gain available via the GAIN [3] knob. Note that channels 1-8 line inputs are initially attenuated by 15 dB.

Always be sure to perform the Level-Setting Procedure (page 3) when you connect a new input.

To learn how signals are routed from these inputs, see the details lovingly described in the Channel Strip section.


To connect balanced lines to these inputs, use a 1/4" tip-ring-sleeve (TRS) plug, the type found on some stereo headphones:

- Tip = positive (+ or hot)
- Ring = negative (- or cold)
- Sleeve = shield or ground

To connect unbalanced lines to these inputs, use a 1/4" mono (TS) phone plug or standard instrument cable:

- Tip = signal (+)
- Sleeve = ground

3. GAIN

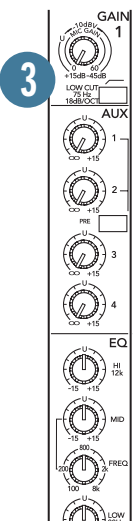


These controls are not in the patchbay, but they are the top row of knobs in the channel strip section. (They are so vitally linked with the inputs, this seemed like a good place to describe them.)

Every time you plug something into a MIC [1] or LINE [2] input jack, you should perform the Level-Setting Procedure, and that procedure is basically "how to use the GAIN knob."

GAIN adjusts the input sensitivity of the MIC and LINE inputs. This allows signals from the outside world to be adjusted to optimal internal operating levels.

Through the XLR jack (MIC), there will be 0 dB of gain with the knob fully down, ramping to 60 dB of gain fully up.

Through the 1/4" input (LINE), there is 15 dB of attenuation fully down and 45 dB of gain fully up, with unity gain (U) at 10:00.

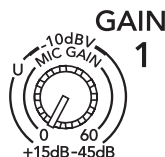

This 15 dB of attenuation can be very handy when you are inserting a signal that is very hot, or you want to add a lot of EQ gain, or both. Without this "virtual pad," a scenario like this might lead to channel clipping.


The GAIN controls for stereo channels 9-10 and 11-12 are only used to adjust the Mic inputs. The line inputs are set to unity gain.

The GAIN controls for channels 13-14 and 15-16 only adjust the line-level inputs, as they have no Mic inputs.

4. INSERT

Found only on channels 1-8, these 1/4" unbalanced jacks are for connecting serial effects processors such as compressors, equalizers, de-essers, or filters. The insert point is after the GAIN [3] control, but before the channel's EQ [32], LOW CUT [34], FADER [25] and MUTE [30] controls.


Insert cables must be wired thusly:

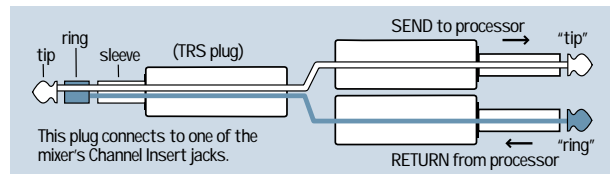

- Tip = send (to effects device input)
- Ring = return (from effects device output)
- Sleeve = common ground

Even though channels 1-8 already have DIRECT OUT [5] jacks, INSERT jacks can also be used as channel direct outputs (as they are post-GAIN, pre-EQ, pre-LOW CUT, pre-FADER, and pre-MUTE).

Appendix B, page 27 has a lovely diagram (Figure F) showing three ways you can use the INSERT jacks.

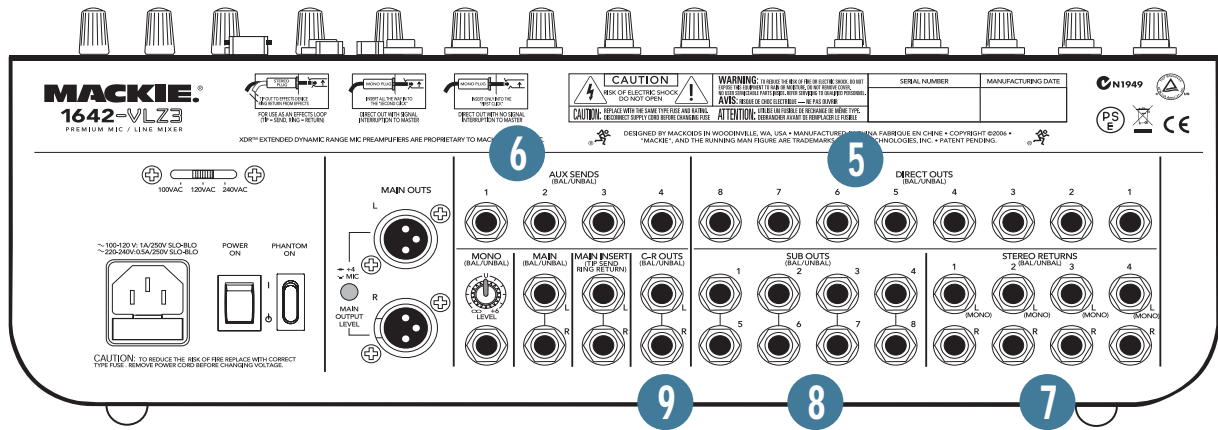


5. DIRECT OUT

Only on channels 1–8, these 1/4" balanced jacks deliver the signal from the very end of the channel path; post-GAIN [3], post-EQ [32], post-LOW CUT [34], post-FADER [25], and post-MUTE [30]. Use these for recording, making the 1642-VLZ3 perfect for an 8-track studio.

RECORDING

When recording, you use the first two channels for your sound sources: vocal mics, drum mics, keyboard/synth outputs, guitar effects outputs, that sort of thing. From there, the channels manipulate the sound, but are not assigned to the output section. Instead, they're patched from the channel's DIRECT OUT [5] jacks to any of your 8 multitrack inputs. This allows recording of two tracks at a time. By reconnecting the Direct Outs to the different tape inputs, you can record to all of the 8 tracks.

Once the tracking is completed, the outputs of the multitrack are then patched to channels 3-12 LINE [2] inputs on the 1642-VLZ3 (multitrack out 1 to LINE input 3, 2 to 4, 3 to 5, etc.). Aha! That's why it says "TRACK 1" next to channel 3's fader, "TRACK 2" next to channel 4, and so forth. These channels (3–12) will be assigned to the mixer's output section, delivering the signals to their ultimate destination, which may be your mixdown 2-track, your control room system, or your headphones.

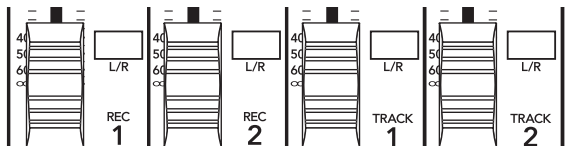

But let's not forget that the 1642-VLZ3 is a 4-bus mixer. These buses lead to the SUB OUTS [8], and are designed to accomplish the task of getting channels to the multitrack without using the direct outputs.

For example, a channel is assigned to SUB OUT 1. SUB OUT 1's output is patched to multitrack input 1. From there, the multitrack output goes to the mixer's channel 3 LINE input, as we just discussed.



Double Busing


How on earth do you get four buses to feed eight tracks? Double busing!

- Bus 1 feeds SUB OUT 1 and SUB OUT 5, which in turn feed tracks 1 and 5
- Bus 2 feeds SUB OUT 2 and SUB OUT 6, which in turn feed tracks 2 and 6
- Bus 3 feeds SUB OUT 3 and SUB OUT 7, which in turn feed tracks 3 and 7
- Bus 4 feeds SUB OUT 4 and SUB OUT 8, which in turn feed tracks 4 and 8

Patch the 8 SUB OUTS to the inputs of the 8-track deck. Tracks in record mode will accept the signal, and tracks in safe mode will ignore the signal.

The advantages: You can assign any channel to any track, without repatching. You can assign multiple channels to one track and control the overall level of that subgroup. You can't bounce tracks without this feature.

By returning the outputs of the effects processors to 13/14 (EFX A) and 15/16 (EFX B), you can choose to record or Monitor with effects.

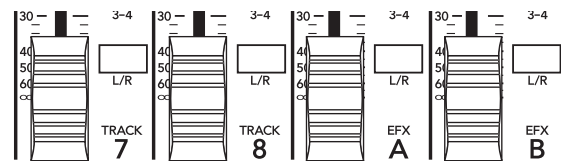

Perhaps the best recording method is a combination of both approaches: Use the SUB OUTS to feed multichannel submixes (like a drum kit) to some of the tracks, and the DIRECT OUT jacks to feed single-channel signals (like bass guitar) to the other tracks.

The point is that you never listen directly to the source channels. You listen to the monitor channels (3–12) and they're listening to the multitrack that is listening to the source channels. The main advantage is that you won't be forced to constantly repatch your multitrack — just set it up and forget it. You'll also know for certain that the signals are indeed getting to the multitrack, since you're constantly listening to it.

Another method of interfacing a multitrack is called in-line monitoring, and requires a mixing console dedicated to that, like the Mackie 8•Bus. Each of its channels is actually two channels: one carrying the mic/line sound source and the other carrying the multitrack output.


6. AUX SEND OUTPUTS

These 1/4" jacks usually patch to the inputs of your parallel effects devices or to the inputs of your stage monitor amps. To learn how signals are routed to these outputs, see the Aux discussion on page 21.


EFFECTS: SERIAL OR PARALLEL?

You've heard us carelessly toss around the terms "serial" and "parallel." Here's what we mean by them:

"Serial" means that the entire signal leaves the mixer (INSERT send), is routed through the effects device, and returns to the mixer (INSERT return). Examples: compressor, limiter, graphic equalizer. Line-level sources can also be patched through a serial effects device before or after the mixer.

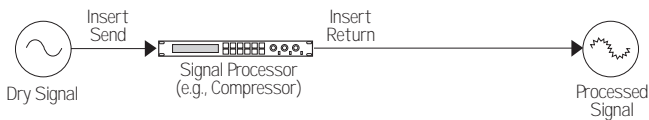

"Parallel" means that a portion of the signal in the mixer is tapped off to the device (AUX SEND), processed, and returned to the mixer (STEREO RETURN) to be mixed with the original "dry" signal. This way, multiple channels can all make use of the same effects device. Examples: reverb, digital delay.

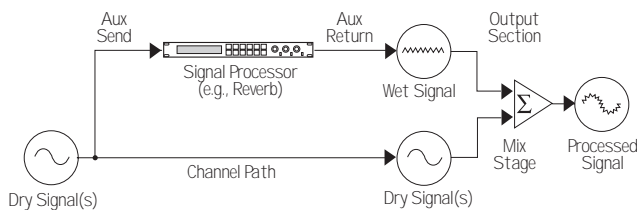

7. STEREO RETURN INPUTS

This is where you connect the outputs of your parallel effects devices (or extra audio sources). There are four stereo returns. They'll accept just about any pro or semi-pro effects device on the market. See page 22 for details of the STEREO RETURN [51] level controls.

Mono: If you have an effects device with a mono output (one cord), plug that into the left input of a STEREO RETURN and leave the right input unplugged. That way, the signal will be sent to both sides, magically appearing in the center as a mono signal.

8. SUB OUTS


These 1/4" jacks are usually patched to the inputs of a multitrack deck, or to secondary amplifiers in a complex installation. See page 18 for details of the SUBGROUP FADERS [38]. (See also the discussion on double bus-ing on the previous page.)

9. C-R OUTS (CONTROL ROOM OUTPUTS)

These 1/4" jacks are usually patched to the inputs of your control room amplifier or a headphone distribution amplifier. See page 19, CONTROL ROOM and PHONES [43] for details of the signal routing to these outputs.

10. PHONES OUTPUTS

These stereo 1/4" phones jacks will drive any standard headphone to very loud levels. Walkperson-type phones can also be used with an appropriate adapter. See page 19, CONTROL ROOM and PHONES [43] for details of the signal routing to these outputs.

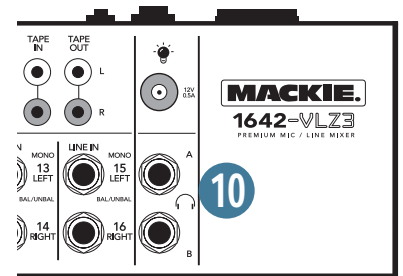

If you're wiring your own cable for the PHONES output, follow standard conventions:


- Tip = left channel
- Ring = right channel
- Sleeve = common ground



WARNING: When we say the headphone amp is loud, we're not kidding. It can cause permanent ear damage. Even intermediate levels may be painfully loud with some earphones. BE CAREFUL!



Always turn the PHONES knob all the way down before connecting headphones. Keep it down until you've put the phones on. Then turn it up slowly. Why? "Engineers who fry their ears find themselves with short careers."

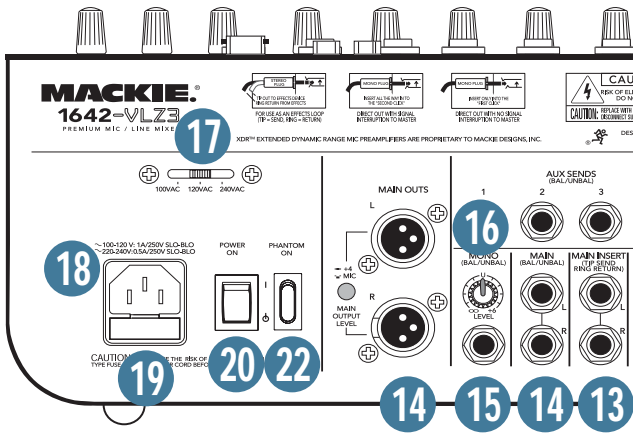


11. TAPE OUTPUT

These unbalanced RCA jacks tap the main mix outputs to make simultaneous recording and PA work more convenient. Connect these to your 2-track recorder's inputs.

See MAIN MIX FADER [37] on page 18 for details of the signal routing to these outputs.

Mono: If you want to feed a mono signal to your tape deck or other device, use the 1/4" MONO [15] output jack instead.

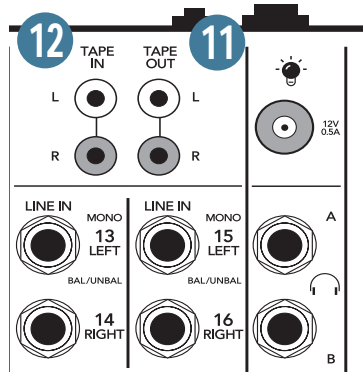

12. TAPE INPUT

These unbalanced RCA jacks are designed to work with semipro as well as pro recorders. Connect your 2-track tape recorder's outputs here, using quality hi-fi RCA cables. To learn how signals are routed from these inputs see page 19, TAPE IN LEVEL [40].


Use these jacks for convenient playback of your mixes. You'll be able to review a mix, and then rewind and try another pass without repatching or disturbing the mixer levels. You can also use these jacks with a portable tape or CD player to feed music to a PA system between sets.



NOTE: Pushing TAPE TO MAIN MIX [41] in the output section automatically disconnects the TAPE [11] OUTPUT from the main outputs. This prevents creating a feedback loop, which could create quite a howl in your system (and your audience!)

13. MAIN INSERT

These 1/4" jacks are for connecting serial effects such as compressors, equalizers, de-essers, or filters. The INSERT point is after the mix amps, but before the MAIN MIX fader. Insert cables must be wired thusly:

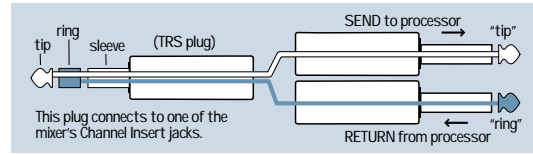

- Tip = send (to effects device inputs)
- Ring = return (from effects device outputs)
- Sleeve = common ground (connect shield to all three sleeves)

14. MAIN OUTS

Two sets of jacks are provided for the main outputs: 1/4" TRS jacks and XLR jacks. These are usually patched to the inputs of your 2-track mixdown deck (unless you've chosen to use the TAPE OUTPUT [11] RCA jacks), or to the house amplifier during live sound sessions.

In addition, the XLR MAIN OUTS have a switch to match the signal level to the input of the device you're connecting them to. Push the switch in to reduce the output by 40 dB, so you can feed the mic input of another mixer, for example. Leave the switch out to connect to professional +4 dBu devices. To learn how signals are routed to these outputs, see page 18, MAIN MIX FADER [37].

To use the 1/4" outputs to drive balanced inputs, connect 1/4" TRS (Tip-Ring-Sleeve) phone plugs like this:

- Tip = + (hot)
- Ring = - (cold)
- Sleeve = ground

To use these outputs to drive unbalanced inputs, connect 1/4" TS (Tip-Sleeve) phone plugs like this:

- Tip = signal
- Sleeve = ground

15. MONO OUTPUT

It happens to everybody sooner or later: The forces that govern your world will demand a monaural output from your painstakingly-created stereo panorama. The last thing you want to do is start twirling all your carefully-placed PAN [31] settings to one side. What to do? Stick a cord in this 1/4" jack, hand the other end to Mr. Mono, and you're done. He's got his mono mix and you've still got your stereo mix. The MONO output is nothing more than a sum of the left and right main mix.

16. MONO LEVEL

If Mr. Mono's main mono mix is maxed, just reach for this knob and turn it down a bit. Just the thing for sending mono signals to mic inputs like camcorders, telephone interface boxes, even answering machines. With the pot all the way up (fully clockwise), you'll have 6 dB of extra gain, and unity gain is at the 12 o'clock position.

17. VOLTAGE SELECTOR



WARNING: Before you plug the AC power cord into the 1642-VLZ3, you must make sure that this slide switch is set to the same voltage as your local AC main supply. Only slide the voltage switch with the power cord unplugged.

Use a flat headed screwdriver to slide the switch if needed. The switch allows you to use the mixer in different countries and voltages, meet interesting people from other cultures, and entertain them.

18. POWER CONNECTION

Just in case you lose the cord provided with the 1642-VLZ3, its power jack accepts a standard 3-prong IEC cord like those found on most professional recorders, musical instruments, and computers.



WARNING: Before you plug the AC power cord into the 1642-VLZ3, you must make sure that the VOLTAGE SELECTOR [17] slide switch is set to the same voltage as your local AC mains supply.



WARNING: Disconnecting the plug's ground pin can be dangerous. Please don't do it.

19. FUSE

The 1642-VLZ3 is fused for your (and its own) protection. If you suspect a blown fuse, disconnect the power cord, pull the fuse drawer out (located just below the cord receptacle) and replace the fuse with a 1 A SLO BLO, 5x20mm, available at electronics stores or your dealer (or a 0.5 A SLO BLO 5x20mm if your 1642-VLZ3 is set to 220V-240V).

If two fuses blow in a row, something is very wrong. Please call our toll-free number 1-800-898-3211 from within the U.S. (or call the distributor in your country) and find out what to do.

20. POWER SWITCH


Press the top of this rocker switch inwards to turn on the mixer. The POWER LED [21] on the top surface of the mixer will glow with happiness, or at least it will if you have the mixer plugged in to a suitable live AC mains supply.

Press the bottom of this switch to turn off the mixer, whenever you feel that this would be a safe thing to do.

As a general guide, you should turn on your mixer first, before the power amplifier or powered speakers, and turn it off last. This will reduce the possibilities of any turn-on, or turn-off thumps in your speakers.

21. POWER LED

You've probably already figured this out, but if the POWER [20] switch is on, this LED (light-emitting diode) will light. If the switch is off, well, you get the idea. If the POWER [20] switch is on and the LED does not glow, one of three things has happened: Somebody tripped over the power cord and yanked it from the outlet, your electricity has been turned off due to nonpayment, or the FUSE [19] has blown.

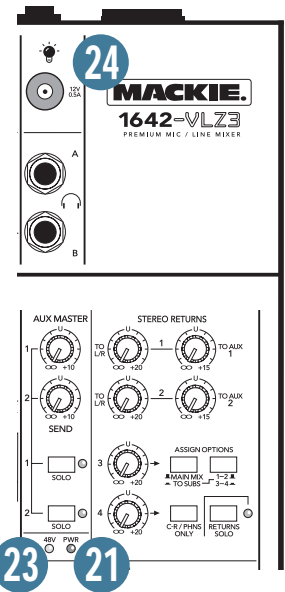

22. PHANTOM SWITCH

This switch controls the phantom power supply for condenser microphones as discussed on page 8. When turned on (or off), the phantom power circuitry takes a few moments for voltage to ramp up (or down). This is perfectly normal.

23. 48V LED

This is just to let you know which way you have the PHANTOM [22] switch set. If your dynamic mics work and your condensers don't, chances are this LED is off, so turn the PHANTOM switch on.

You'll notice that when you turn the phantom power off, the LED stays on for a while. This is a natural phenomenon — the LED is actually a voltmeter telling you that the phantom power takes time to ramp itself down to zero volts. So, if you've turned phantom power off to connect something to the mic inputs, wait until the LED stops glowing and then make your connections safely.

24. BNC LAMP SOCKET

Located in the top right corner of the output section, this 12V socket will drive any standard BNC-type lamp (a Littlite® #12G or #12G-HI (high-intensity), for instance).

Channel Strip Description

There are eight mono, and four stereo channel strips. Many of the functions are identical for the mono and stereo channels. We'll start at the bottom and work our way up, pointing out the differences as we go along.



"U" LIKE UNITY GAIN

Mackie mixers have a "U" symbol on almost every level control. This "U" stands for "unity gain," meaning no change in signal level. Once you have performed the Level-Setting Procedure, you can set every control at "U" and your signals will travel through the mixer at optimal levels. Also, the labels on our controls are measured in decibels (dB), so you'll know what you're doing level-wise if you choose to change a control's settings.

25. CHANNEL FADER

The fader is almost the last control in a channel's signal path. It's placed after the EQ [32] and MUTE [30] (post-EQ/post-MUTE), and before PAN [31] (pre-PAN). The "U" mark, about three-quarters of the way up, indicates unity gain, meaning no increase or decrease of signal level. All the way up provides an additional 10 dB, should you need to boost a section of a song. If you find that the overall level is too quiet or too loud with a fader near unity, you'll want to confirm the GAIN setting by performing the Level-Setting Procedure.



A Clean Fade

Faders are not rocket science — they operate by dragging a metal pin (the wiper) across a carbon-based strip (the track). It is possible for airborne crud to land on the track. Should that happen, you may hear scratchy noises or signal dropouts as the wiper stumbles over the crud. Do all you can to keep airborne crud out of your profession. Use air conditioned rooms whenever possible, avoid smoking near the mixer, keep food and drink away from the mixer, and for pity's sake, never put the mixer in your kitchen! We also recommend "exercising" the faders — give them a walk up and down once a week or so, and that will help scare the crud away. We do not recommend spray cleaners.

26. ASSIGN (1-2, 3-4, L/R)

Alongside each channel fader are four buttons, labeled SOLO, 1-2, 3-4 and L/R. The bottom three are collectively referred to as channel assignment switches. 1, 3 and L are the left sides of these stereo pairs, and 2, 4 and R are the right sides. Used in conjunction with the channel's PAN [31] knob, these switches determine the destination of a channel's signal: With the PAN knob set at the center detent, the left and right sides receive equal signal levels. To feed only one side or the other, just turn the PAN knob accordingly.

If you're doing a mixdown to a 2-track, simply engage the L/R switch on each channel that you want to hear, and they'll be sent to the main mix. If you want to create a subgroup of certain channels, engage either the 1-2 or 3-4 switches instead of the L/R, and they'll be sent to the appropriate subgroup faders. From there, the subgroups can be sent back to the main mix, allowing you to use the subgroup faders as a master control for those channels.

If you're printing new tracks or bouncing existing ones, you'll also use the 1-2 and 3-4 switches, but not the L/R switch. Here, you don't want the subgroups sent back into the main mix, but sent out, via the SUB OUT [8] jacks, to your multitrack inputs. However, if you're printing tracks via the DIRECT OUT [5] jacks, all the channel assign switches should be disengaged (up).


The 1642-VLZ3 is what we call a "true 4-bus mixer." Each channel can be assigned or unassigned to any of the subgroups without affecting the other subgroups or settings within the channel, and each subgroup has its own master fader and dedicated output. In fact, since there are 4 subgroups and the main L/R mix, it's actually a true 6-bus mixer.

27. SOLO

This lovable switch allows you to check signals in your headphones and control room without having to assign them to the L/R, 1-2 or 3-4 mixes.

You can solo as many channels as you like. SOLO does not interrupt any of the other channels, buses or outputs — that's called nondestructive solo. When SOLO is pressed, that channel's -20 (SOLO) LED [28] will light constantly, so you can easily catch any channels which have been soloed by those naughty SOLO pixies.

Using the MODE [44] switch, the 1642-VLZ3's solo system comes in two flavors: NORMAL (AFL) (sometimes called SIP, or solo-in-place) and LEVEL SET (PFL) (sometimes called PFL, or pre-fader-listen). The MODE switch is described on page 20.

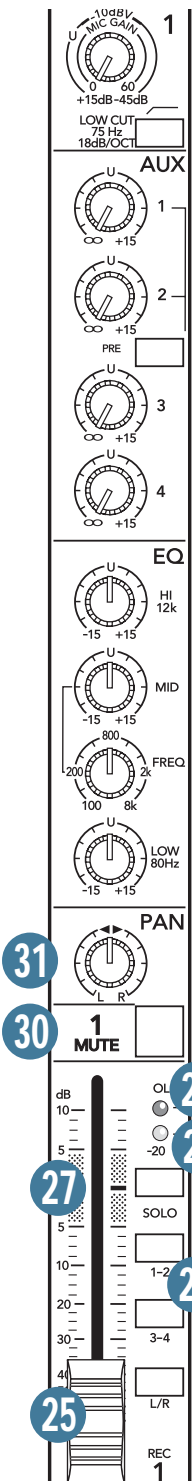



LEVEL SET (PFL) taps the channel signal before the fader. If you have a channel's fader set way below "U" (unity gain), SOLO won't know that and will send a unity gain signal to the control room, headphones, and meters. That may result in a startling level boost at these outputs, depending on the position of the SOLO [46] level knob.

In a nutshell, soloed channels are sent to the SOURCE [42] mix, that ultimately feeds your control room, headphones, and meters. Whenever SOLO is engaged, all SOURCE selections (MAIN MIX, 1-2, 3-4 and TAPE) are defeated, to allow the soloed channel to do just that — SOLO!

28. -20 (SOLO) LED

An LED that does two completely different things! This saves space, but requires some explanation.

First, the "-20" part: Often referred to as "signal activity," this LED will flicker in time with the signal present in that channel. It's handy for confirming that a channel is indeed active, and may also lend a clue as to what the signal is. For instance, a kick drum will cause the LED to pulse in time with the drum, and a synth pad will cause it to glow a bit more steadily.

Now for the "SOLO" part: When a channel's SOLO [27] switch is engaged, this LED will glow steadily. It will also be brighter than it would be as a -20 indicator. In conjunction with the RUDE SOLO LIGHT [47], you can find a rogue SOLO switch very quickly.

29. OL (MUTE) LED

Another LED that does two different things!

First, the "OL" part: "OL" means overload, or clip. You don't want that to happen. Ever. Clipping can happen to any mixer — it's the point where the signal's voltage tries to exceed the supply voltages that power the circuitry. This OL LED will come on just before clipping, so if you see it, take immediate action: Perform the Level-Setting Procedure. If that doesn't help, check for excessive use of EQ boost or fader gain. Like the -20 LED, it will flicker in time with that channel's signal.

Now for the "MUTE" part. Assuming your levels are set correctly, the OL LED will never come on as a result of clipping. That's pretty boring. So, to liven things up, this LED will glow steadily when that channel's MUTE switch is engaged.

Here is a quick reference to these LEDs:

| Name | Color | Flickering | Glowing |
|------------|-------|------------------|----------------|
| -20 (SOLO) | green | signal present | channel soloed |
| OL (MUTE) | red | channel clipping | channel muted |

30. MUTE

Engaging a channel's MUTE switch provides the same results as turning the fader all the way down: Any channel assignment to L/R, 1-2 or 3-4 will be interrupted. All the post AUX sends will be silenced, as will the DIRECT OUT [5] signals on channels 1 through 8. And of course, that fun-loving OL (MUTE) LED [29] will commence to glow. The PRE AUX sends, channel INSERT [4] send and SOLO [27] (in LEVEL SET (PFL) mode) will continue to function during MUTE.

Depending on the audio content in a channel, engaging its MUTE switch may cause a slight popping sound. This is not a problem within the mixer, and it can be avoided: Simply engage the LOW CUT [34] switch on each channel (unless its low frequency content is vitally important, such as a kick drum or bass guitar). LOW CUT eliminates subsonic debris, which causes the pop, and its effect is usually transparent.

31. PAN

PAN adjusts the amount of channel signal sent to the left versus the right outputs. PAN determines the fate of the L/R assignment, subgroups 1-2 and 3-4, and the SOLO [27] (in NORMAL (AFL) mode).

With the PAN knob hard left, the channel signal will feed the left main mix, subgroup 1, subgroup 3 and left NORMAL (AFL) solo mode (assuming their assignment switches are engaged).


With the knob hard right, the channel signal feeds the right main mix, subgroup 2, subgroup 4 and right NORMAL (AFL) solo mode.

With the PAN knob set somewhere in-between left and right, the signal will be divided between the left and right buses.

The PAN knob behaves a little differently for the stereo channel strips. Since there is a left and right input on these channels, the PAN knob controls the relative balance between the left and right sides, just like the balance control on your stereo system at home.

Stereo Sources

Use channels 9-16 to connect stereo sound sources. If you must use the mono channel strips (1-8) for stereo sources, follow this standard convention: Always plug the left signal into an "odd" channel (1, 3, 5, etc.) and the right signal into the adjacent "even" channel (2, 4, 6, etc.). Then pan the odd channel hard left and the even channel hard right.

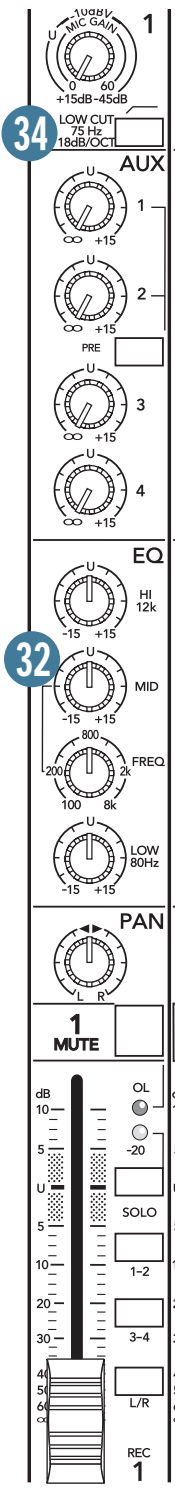

CONSTANT LOUDNESS !!!

The 1642-VLZ3's PAN [31] controls employ a design called "Constant Loudness."


It has nothing to do with living next to a freeway. As you turn the PAN knob from left to right (thereby causing the sound to move from the left to the center to the right), the sound will appear to remain at the same volume (or loudness).

If you have a channel panned hard left (or right) and reading 0 dB, it must dip down about 4 dB on the left (or right) when panned center. To do otherwise, like those Brand X mixers, would make the sound appear much louder when panned center.

32. 3-BAND MID-SWEEP EQ


The eight mono channels have a 3-band, mid-sweep equalization: LOW shelving at 80 Hz, MID sweep peaking from 100 Hz to 8 kHz, and HI shelving at 12 kHz. It's probably all the EQ you'll ever need! (Shelving means that the circuitry boosts or cuts all frequencies past the specified frequency. For example, the 1642-VLZ3's LOW EQ boosts bass frequencies starting at 80 Hz and continuing down to the lowest note you never heard. Peaking means that certain frequencies form a "hill" around the center frequency.)

The LOW EQ provides up to 15 dB boost or cut below 80 Hz. The circuit is flat (no boost or cut) at the center detent position. This frequency represents the punch in bass drums, bass guitar, fat synth patches, and some really serious male singers.

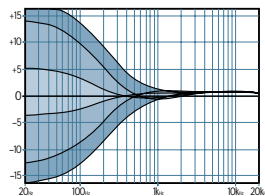


Used in conjunction with the LOW CUT [34] switch, you can boost the LOW EQ without injecting a ton of subsonic debris into the mix. We recommend using the LOW CUT feature on all channels, except low frequency signals, like kick drums and bass guitars.

The MID EQ, or "midrange," has a fixed bandwidth of 1 octave. The MID knob sets the amount of boost or cut, up to 15 dB, and is effectively bypassed at the center detent. The frequency knob sets the center frequency, sweepable from 100 Hz to 8 kHz.

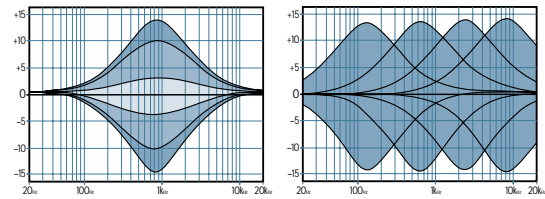

Most of the root and lower harmonics that define a sound are located in the 100 Hz–8 kHz frequency range, and you can create drastic changes with these two knobs. Many engineers use MID EQ to cut midrange frequencies, not boost them. One popular trick is to set the MID fully up, turn the frequency knob until you find a point where it sounds just terrible, then back the MID down into the cut range, causing those terrible frequencies to disappear. Sounds silly, but it works. Sometimes.

The HI EQ provides you up to 15 dB boost or cut above 12 kHz, and it is also flat at the detent. Use it to add sizzle to cymbals, an overall sense of transparency, or an edge to keyboards, vocals, guitar and bacon frying. Turn it down a little to reduce sibilance or to mask tape hiss.

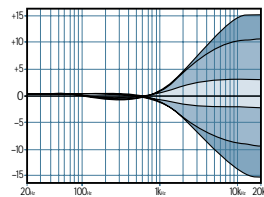

With too much EQ, you can screw things up royally. We've designed a lot of boost and cut into each equalizer circuit because we know everyone will occasionally need that. But if you max the EQ on every channel, you'll get mix mush. Equalize subtly and use the left sides of the knobs (cut), as well as the right (boost). If you find yourself repeatedly using full boost or cut, consider altering the sound source, such as placing a mic differently, trying a different kind of mic, changing the strings, or gargling.

33. 4-BAND FIXED-FREQUENCY EQ

The stereo channels (9-16) have a 4-band, fixed-frequency equalization: LOW shelving at 80 Hz, LOW MID peaking at 400 Hz, HI MID peaking at 2.5 kHz, and HI shelving at 12 kHz.


Each of these filters provides up to 15 dB of boost or cut. As with the mono channels, the circuit is flat (no boost or cut) at the center detent positions.

34. LOW CUT

The LOW CUT switch (not present on channels 13-16), often referred to as a high pass filter, cuts bass frequencies below 75 Hz at a rate of 18 dB per octave. This ain't no thrown-in dime-store filter — an 18 dB per octave curve requires an elaborate circuit. Nothing but the best for you.

We recommend that you use this on every sound source except kick drum, bass guitar, bassy synth patches, or recordings of earthquakes. These aside, there isn't much down there that you want to hear, and filtering it out makes the low stuff you do want much more crisp and tasty. Not only that, but low cut can help reduce the possibility of feedback in live situations, and it helps to conserve amplifier power.

With LOW CUT, you can safely boost LOW EQ. Many times, bass shelving eq can really benefit voices. Trouble is, adding LOW EQ also boosts the subsonic debris: Stage rumble, mic handling clunks, wind noise and breath pops. LOW CUT removes all that debris so you can boost the LOW EQ without frying your woofer. Here's a frequency curve of LOW EQ combined with LOW CUT:

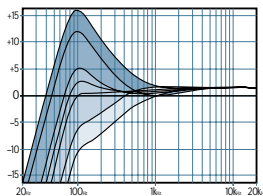

35. AUX 1, 2, 3, & 4

These four knobs tap a portion of each channel's signal, mix them together and send them to the AUX SEND [6] outputs. They are off when turned fully down, deliver unity gain at the center detent, and can provide up to 15 dB of gain turned fully up. Chances are you'll never need this extra gain, but it's nice to know it's there if you do.

The AUX SEND outputs can then be patched to parallel effects processor inputs or stage monitor amp inputs. AUX SENDS 1 and 2 levels are controlled not only by the channel's AUX knobs, but also by the AUX SEND [49] master knobs.

AUX SENDS can also be used to generate separate mixes for recording or "mix-minuses" for broadcast. By

using AUX 1 or 2 in the PRE [36] mode, these mix levels can be obtained independently of a channel's fader settings.





We recommend going into a stereo reverb in mono and returning in stereo. We have found that on most "stereo" reverbs, the second input just ties up an extra aux send and adds nothing to the sound. There are exceptions, so feel free to try it both ways. Should you choose to use two aux sends, use the "odd" AUX (1 or 3) to feed its left input and the "even" AUX (2 or 4) to feed the right input. Remember, if you're also dealing with a stereo source signal, you'll want to follow the sides — use the odd AUX on the channel carrying the left side and the even AUX on the channel carrying the right.

36. PRE


This switch determines the tap point of AUX 1 and 2. Generally, "post" sends are used to feed effects devices, and "pre" sends are used to feed your stage monitors. See the "Pre vs. Post" diagram below. AUX 3 and 4 are always in post mode.

In post mode (switch up), AUX 1 and 2 will follow the EQ [32], LOW CUT [34], FADER [25] and MUTE [30] settings. If you fade the channel, you fade the send. This is a must for effects sends, since you want the levels of your "wet" signals to follow the level of the "dry."

In PRE mode (switch down), AUX 1 and 2 follow the GAIN [3] and LOW CUT settings only. EQ, PAN [31], FADER and MUTE settings have no effect on the PRE sends. This is the preferred method for setting up stage monitor feeds — they'll be controlled independently of the fader and mute moves.

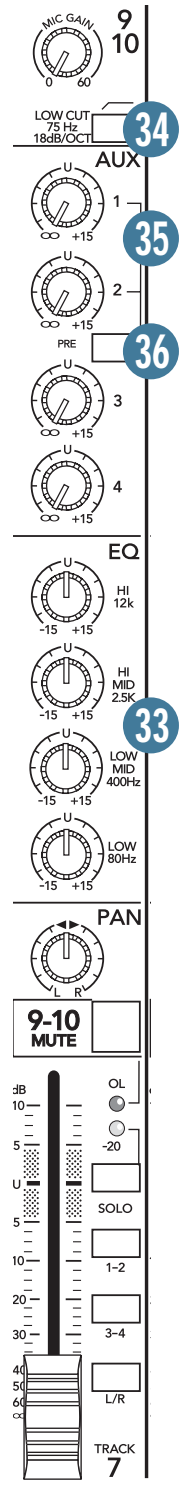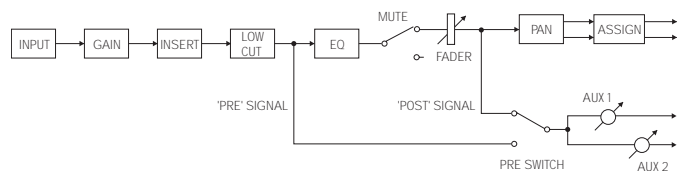

Output Section Description

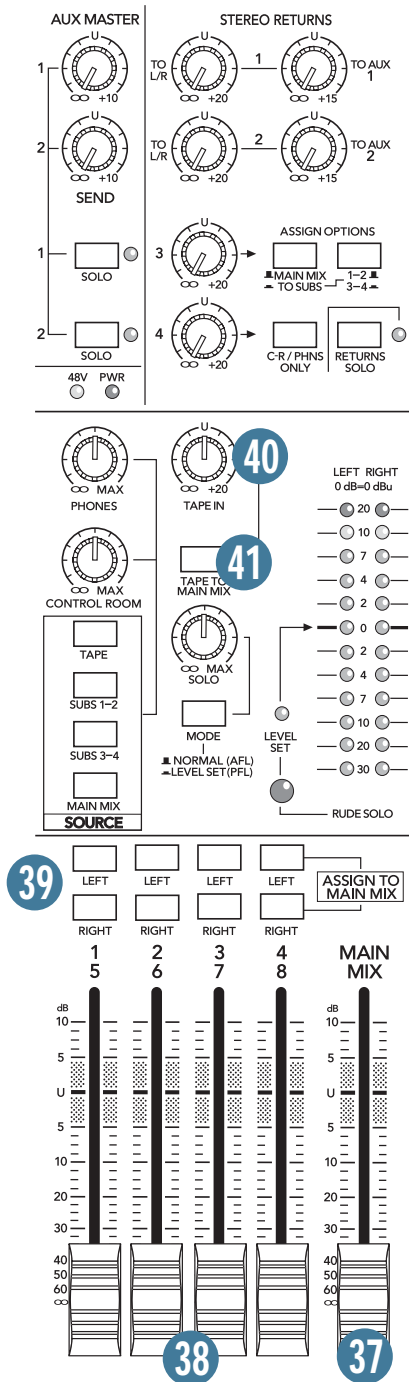

You've just learned about the input channels and how the signals get in and out. The signals come in via MIC [1] and LINE [2] input jacks, are manipulated by the channels, and then sent to the output section. In the output section, things get a bit more complicated, so put on your thinking caps.

37. MAIN MIX FADER

This controls the levels of signals sent to the MAIN OUTS [14] and TAPE [11] OUTPUT jacks. All channels and stereo returns that are assigned to the main mix, that are not muted or turned fully down, will appear at the MAIN OUTS. Before the main mix gets to this fader, the signals pass through the MAIN INSERT [13].

The main mix signals are off with the fader fully down, the "U" marking is unity gain, and fully up provides 10 dB of additional gain. This additional gain will typically never be needed, but it's nice to know it's there. The fader itself is a stereo version of the channel and subgroup faders — same supersmooth custom taper, same dead silence when turned fully down. This is the fader to pull down at the end of the song when you want "The Great Fade-Out."

38. SUBGROUP FADERS


As you might expect, these faders control the levels of signals sent to the SUB OUT [8] jacks. All channels that are assigned to subgroups, not muted and not turned fully down, will appear at the SUB OUTS. Unlike the MAIN OUTS [14], the subgroup signals do not pass through an insert jack on their way to the subgroup faders. That's no problem — should you want to send these signals through a serial effects processor, simply patch from the SUB OUTS to the effect's input, and from the effect's output to whatever the final destination is, usually a multitrack recorder.

The subgroup signal is off when its fader is fully down, the "U" marking is unity gain, and fully up provides 10 dB additional gain. Remember that if you're treating two subgroups as a stereo pair, subgroup 1 and 2 for example, make sure that both subgroup faders "ride" together, to maintain the left/right balance.

39. ASSIGN TO MAIN MIX

One popular use of the subgroups is to use them as master faders for a group of channels on their way to the main mix. Let's say you've got a drum kit hogging up seven channels and you're going to want to fade them out at a different rate than the other channels. You don't want to try that with seven hands or seven fingers, so just un-assign these channels from L/R, reassign them to subgroup 1-2, engage the ASSIGN TO MAIN MIX, LEFT on subgroup 1 and RIGHT on subgroup 2. Now you can ride the entire stereo drum mix with two faders — 1 and 2.

If you engage just one of these switches per subgroup (left or right), the signal sent to the main mix will be the same level as the SUB OUTS [8]. If you want a subgroup to appear in the center of the main mix, engage both left and right switches for that subgroup. The signal will be sent to both sides, and will be attenuated just enough to preserve constant loudness, just like the channel PAN [31] knobs when set in the center.

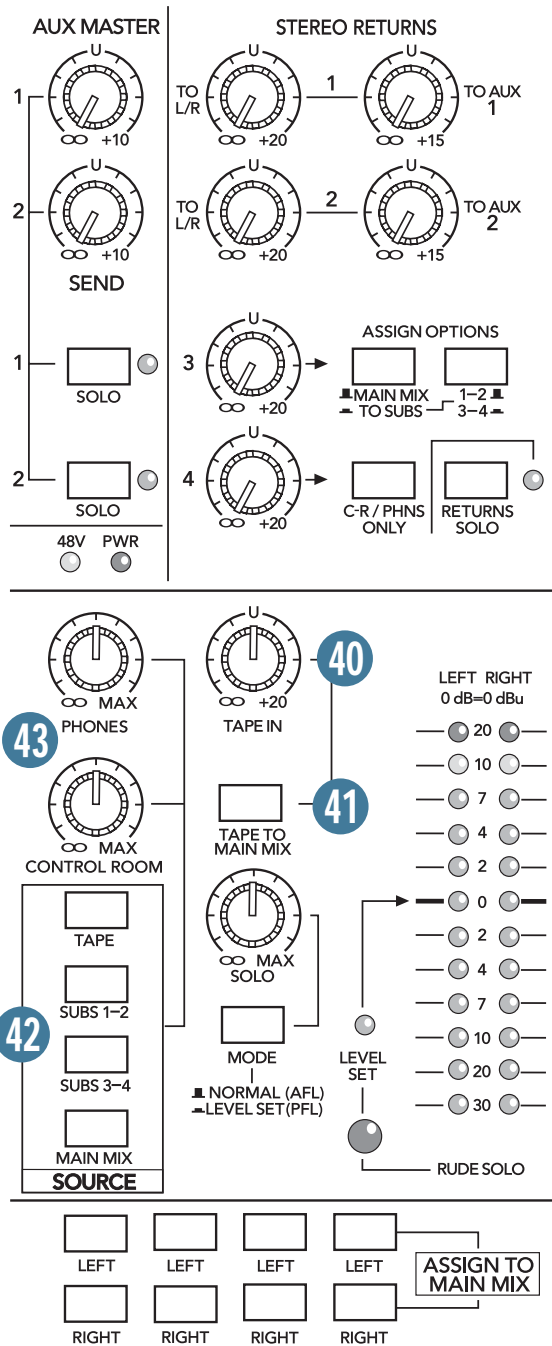

40. TAPE IN (LEVEL)

This knob controls the level of the stereo signal coming from the TAPE [12] INPUT RCA jacks. Its range is off when fully down, unity at the center detent, with 20 dB additional gain turned fully up, which may come in handy if you've patched in a device with wimpy output levels. After the TAPE IN level is determined, the stereo tape signal can be sent to either of two places — the main mix or the SOURCE [42] matrix.

41. TAPE TO MAIN MIX

Engaging this switch is just like engaging the L/R switch on a channel — the signal, stereo in this case, is sent to the main mix. It does not interrupt other signals, just adds itself to them. This switch can be very handy in a live sound situation when you want to play soothing elevator music to an anxious crowd.

42. CONTROL ROOM SOURCE

Typically, the engineer sends the main mix to a live audience or to a mixdown deck (if recording). But what if the engineer needs to hear something other than the main mix? With the 1642-VLZ3, the engineer has several choices of what to listen to.

Via these switches, you can choose to listen to any combination of MAIN MIX, SUBS 1-2, SUBS 3-4 and TAPE. Selections made here deliver stereo signals to the control room, headphones, and meter display. These signals are tapped off as follows — post-MAIN MIX [37] fader, post SUBGROUP [38] faders, and post-TAPE IN [40] knob. With no switches engaged, there will be no signal at these outputs and no meter indication, with two exceptions: SOLO and STEREO RETURN 4.

Regardless of the SOURCE selection, engaging a SOLO [27] switch will replace that selection with the SOLO signal, also sent to the control room, headphones, and meters. This is what makes the Level-Setting Procedure so easy to do.

Now you know how to select the signals you want to send to the engineer's control room and/or phones. From there, these signals all pass through two level controls:

43. CONTROL ROOM AND PHONES

These knobs control the level of the stereo C-R OUTS [9] and PHONES [10] outputs.

You can use the control room outputs for other applications, such as an additional main mix output with its own level control. However, should you do this, be aware that if you engage a SOLO switch, it will interrupt the mix:

Once again, engaging a SOLO [27] switch will cause this dramatic turn of events: Any existing SOURCE [42] matrix selections will be replaced by the SOLO signals, appearing in the control room, headphones, and meters. The audible solo levels are controlled by the SOLO [46] level knob. The SOLO levels appearing on the meter display are not controlled by anything — you wouldn't want that. You want to see the actual channel level on the meter display, regardless of how loud you're listening.

44. MODE (NORMAL (AFL)/LEVEL SET (PFL))

You may have already seen some of this in the SOLO discussion, but in case you missed it: The 1642-VLZ3's solo system comes in two flavors:

- NORMAL (AFL) (sometimes called SIP, or solo-in-place)
- LEVEL SET (PFL) (sometimes called PFL, or pre-fader-listen)

In NORMAL (AFL), the soloed channel's signal is sent directly to the control room, headphones, and meters, just as it would sound to the channel's assignment switches: post-EQ [32], post-FADER [25] and post-PAN [31]. The only difference is that SOLO works regardless of the channel's assignment positions, and that makes it really handy — you can check out a channel before you assign it.

NORMAL (AFL) is the preferred mode during mix-down. For example, if the channel has some midrange boost at 4.2 kHz, is panned a smidgen to the left, and its fader is at -5 dB, that's exactly what you'll hear if you SOLO during NORMAL (AFL) mode. It's just as if you took the time to MUTE all the other channels.

LEVEL SET (PFL) solo is the key player in the all-important Level-Setting Procedure. It'll send the channel's actual internal levels to the meters so you'll know just what's going on, level-wise. This procedure should be performed every time a new sound source is patched into a channel's MIC [1] or LINE [2] input jacks.

LEVEL SET (PFL) is also the preferred mode for SR (sound reinforcement, or live sound), to preview channels before they are let into the mix. It won't give you stereo placement, but will give you signal even if the fader is turned down.



Remember, LEVEL SET (PFL) taps the channel signal before the fader. If you have a channel's fader set way below "U" (unity gain), SOLO won't know that and will send a unity gain signal to the control room, headphones, and meters. That may result in a startling level boost at these outputs, depending on the position of the SOLO level knob.

45. LEVEL SET LED

To quote step 6 of the Level-Setting Procedure, "Push in the MODE [44] switch in the output section (LEVEL SET (PFL) mode) — the LEVEL SET LED will light." When the solo MODE switch is engaged, it's in LEVEL SET (PFL) mode, the mode you must be in to set levels. Now, when you engage any solo switch, this LED will be a "green light" to set levels. If you tried to set levels during NORMAL (AFL) mode, the meter display would be at the mercy of the channel fader, and that would be a big problem.

46. SOLO (LEVEL)

This knob controls the level of the signals coming from the SOLO system. Its range is off when fully down, unity at the center detent, with 10 dB additional gain turned fully up. After the SOLO level is determined, the SOLO signals will proceed to take over the control room, headphones, and meters.



Once again, LEVEL SET (PFL) SOLO taps the channel signal before the fader. If you have a channel's fader set way below "U" (unity gain), LEVEL SET (PFL) SOLO won't know that and will send a unity gain signal to the control room, headphones, and meters. That may result in a startling level boost at these outputs, depending on the position of the SOLO level knob.

47. RUDE SOLO LIGHT

This flashing LED (light emitting diode) serves two purposes — to remind you that you're in SOLO, and to let you know that you're mixing on a Mackie. No other company is so concerned about your level of SOLO awareness. We even force the soloed channel's -20 LED to play along, so you can find that rogue switch fast.


If you work on a mixer that has a SOLO function with no indicator lights, and you happen to forget you're in SOLO, you can easily be tricked into thinking that something is wrong with your mixer. Hence the RUDE SOLO LIGHT. It's especially handy at about 3:00 in the morning, when no sound is coming out of your monitors, even though your multitrack is playing back like mad.

48. METERS

The 1642-VLZ3's peak metering system is made up of two columns of twelve lobster-hypnotizing LEDs. Deceptively simple, considering the multitude of signals that can be monitored by it. If nothing is selected in the SOURCE [42] matrix, and no channels are in SOLO [27], the meter display will just sit there. To put them to work, you must make a selection in the SOURCE matrix (or engage a SOLO switch).

Why? You want the meter display to reflect what the engineer is listening to, and the engineer is listening either to the C-R OUTS [9] or the PHONES [10] output. The only difference is that while the listening levels are controlled by the CTL ROOM and PHONES [43] knobs, the meter display reads the SOURCE mix before the controls, giving you the real facts at all times, even if you're not listening at all.

When the solo MODE [44] switch is set to LEVEL SET (PFL) (down), all soloed signals will be sent to the left meter only. That, combined with LEVEL SET LED [45], are along the path of enlightenment known as the Level-Setting Procedure. During NORMAL (AFL) mode, the meters will behave normally.

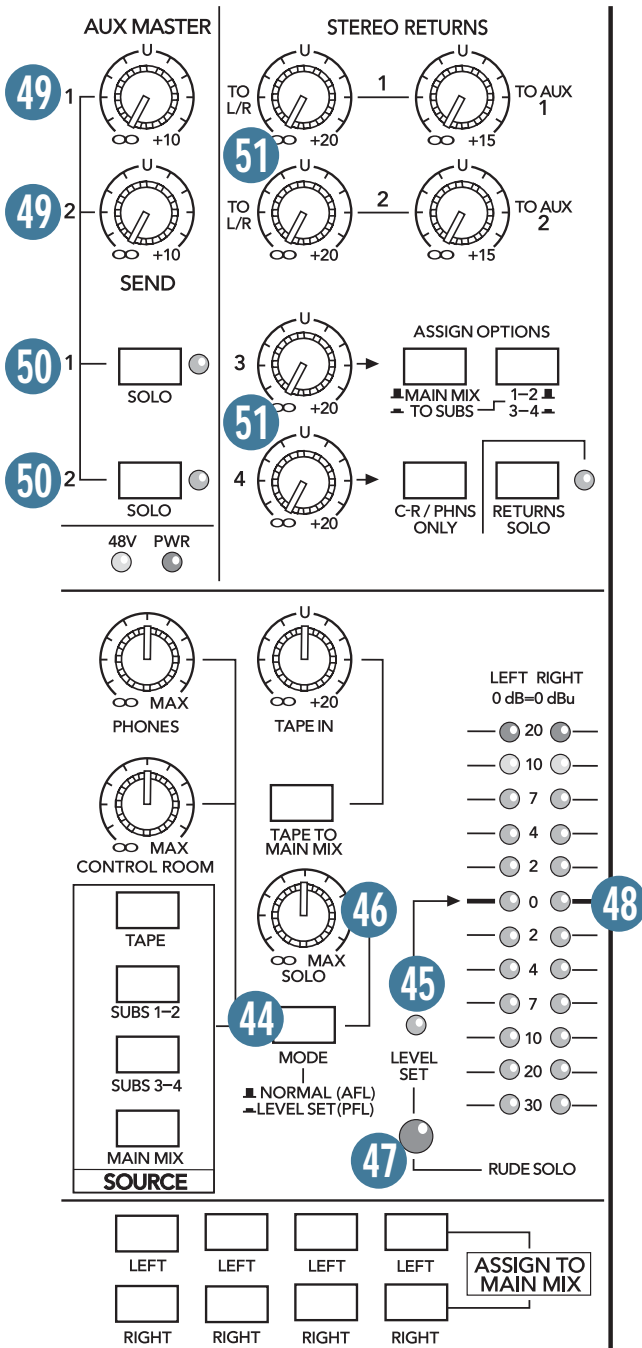

Thanks to the 1642-VLZ3's wide dynamic range, you can get a good mix with peaks flashing anywhere between -20 and $+10$ dB on the meter display. Most amplifiers clip at about $+10$ dB, and some recorders aren't so forgiving either. For best real-world results, try to keep your peaks between "0" and "+7."

Please remember: Audio meter displays are just tools to help assure you that your levels are "in the ballpark." You don't have to stare at them (unless you want to).

AUX DISCUSSION

SENDS are outputs, RETURNS are inputs. The AUX [35] knobs tap the signal off the channel and sends it to the AUX SEND [6] outputs: AUX 1 and 2 are sent to the AUX SENDS 1 and 2 [49] master knobs before the AUX SEND outputs, and AUX 3 through 6 are sent directly.

These outputs are fed to the inputs of a reverb or other device. From there, the outputs of the external device are fed back to the mixer's STEREO RETURN [7] inputs. Then these signals are sent through the STEREO RETURN [51] level controls, and finally delivered to the main mix.

So, the original "dry" signals come from the channels to the main mix and the affected "wet" signals come from the STEREO RETURNS to the main mix, and once mixed together, the dry and wet signals combine to create a glorious sound. Armed with this knowledge, let's visit the Auxiliary World:

49. AUX SENDS (MASTER)

These knobs provide overall level control of AUX SENDS 1 and 2, just before they're delivered to their AUX SEND [6] outputs. This is perfect for controlling the level of stage monitors, since you'll be using AUX 1 and 2 for this, with their PRE [36] switches engaged. AUX SENDS 3 and 4 have no such control — they just send their mixes directly to their AUX SEND outputs at unity gain.

These knobs go from off (turned fully down), to unity gain at the center detent, with 10 dB of extra gain (turned fully up). As with some other level controls, you may never need the additional gain, but if you ever do, you'll be glad you bought a Mackie.

These are usually the knobs you turn up when the lead singer glares at you, points at his stage monitor, and sticks his thumb in the air. (It would follow suit that if the singer stuck his thumb down, you'd turn the knobs down, but that never happens.)

Meters vs. Reality

You may already be an expert at the world of "+4" ($+4$ dBu= 1.23 V) and "-10" (-10 dBV= 0.32 V) operating levels. Basically, what makes a mixer one or the other is the relative 0 dB VU (or 0 VU) chosen for the meter display. A "+4" mixer, with a $+4$ dBu signal pouring out the back will actually read 0 VU on its meter display. A "-10" mixer, with a -10 dBV signal trickling out, will read, you guessed it, 0 VU on its meter display. So when is 0 VU actually 0 dBu? Right now!

At the risk of creating another standard, Mackie's compact mixers address the need of both crowds by calling things as they are: 0 dBu (0.775 V) at the output shows as 0 VU on the meter display. What could be easier? By the way, the most wonderful thing about standards is that there are so many to choose from.

50. AUX SENDS SOLO and LED

In live sound situations, AUX SEND [6] outputs 1 and 2 are likely to feed your stage monitors. You'll want to check the mix you're sending them, and that's what these two buttons are for. (AUX 3 and 4 have no such switch.) Beside each switch is a green LED that, just like the channel's -20 LED, helps you find the rogue SOLO switch.

The only thing different about AUX SENDS SOLO is that it's not really PFL (pre-fader listen), and it's not really SIP (solo-in-place), it's actually AFL (after-fader listen.) Read on:

In the NORMAL (AFL) position of the MODE [44] switch, you'll get AUX SEND 1's solo signal, post-AUX SENDS [49] master level, in the left side of the control room, headphones, and meters, and AUX SEND 2 on the right side. (If you ever use AUX 1 and 2 to create a stereo monitor mix, you'll understand why.)

In the LEVEL SET (PFL) position of the MODE switch, you'll get the signal dead-center, but still post-AUX SENDS master level.

51. STEREO RETURNS (LEVEL)

These four controls set the overall level of effects received from the STEREO RETURN [7] input jacks. These controls are designed to handle a wide range of signal levels — each knob goes from off, to unity gain at the detent, to 20 dB gain fully clockwise, to compensate for low-level effects. Signals passing through these controls proceed directly to the MAIN MIX [37] fader, with exceptions that we'll discuss in a moment.

Typically, these knobs can just live at the center detent, and the effects device's output control should be set at whatever they call unity gain (check their manual). If that turns out to be too loud or too quiet, adjust the effects device's outputs, not the mixer. That way, the mixer's knobs are easy to relocate at the center detent.

52. TO AUX 1 and TO AUX 2

If you want to add reverb or delay to the stage monitor mixes, these are the knobs for you. Operating independently of their respectively numbered STEREO RETURNS [51] level controls, these knobs are the same as the AUX 1 [35] and 2 knobs in the channel strip.

These two knobs feed STEREO RETURN signals to their respective AUX SEND [6] outputs: TO AUX 1 feeds STEREO RETURN 1 to AUX SEND 1 [49] master, and TO AUX 2 feeds STEREO RETURN 2 to AUX SEND 2 master. They are off when turned fully down, deliver unity gain at the center detent, and provide up to 15 dB of gain turned fully up. STEREO RETURN 3 and 4 have no such knobs.

53. MAIN MIX TO SUBS (for RETURN 3)

With this switch up, STEREO RETURN 3 behaves like all the others — it delivers a stereo signal, regulated by its level knob, to the main mix. When you engage this switch, the signals are removed from the main mix buses and sent to the 1-2/3-4 switch [54], which diverts the signal once more. We're not finished. Please read on:


54. 1-2/3-4 (for RETURN 3)

If the MAIN MIX TO SUBS [53] switch is disengaged, the 1-2/3-4 switch does absolutely nothing. Let's now assume it's engaged. STEREO RETURN 3's stereo signal will not be sent to the main mix, but to SUBGROUP FADERS [38] 1 and 2 (this switch up) or 3 and 4 (this switch down).

Let's say you've made a stereo drum submix on SUBGROUP FADERS 1 and 2, so you can ride those two faders instead of the seven channels that the drums came from. SUBGROUP FADER 1 has its ASSIGN TO MAIN MIX [39], left button engaged and SUBGROUP FADER 2 has its ASSIGN TO MAIN MIX, right button engaged, blending the drum submix back into the main mix. The drum channels are also sending signals to your reverb via the AUX SENDS [6], and the reverb outputs are patched into STEREO RETURN 3 [7]. So far so good.

Even though you could send STEREO RETURN 3 directly to the main mix (MAIN MIX TO SUBS [53] switch up), you don't want to. Instead, engage the MAIN MIX TO SUBS switch and make sure the 1-2/3-4 switch is up. Now the reverb return will be blended into the drum submix, and as you ride those two faders, the reverb level will follow.

Why do we want that? Because if you had just sent the reverb directly to the main mix (MAIN MIX TO SUBS switch up) and you did a drum fade-out using SUBGROUP FADERS 1 and 2, the "dry" signals would fade out, but the "wet" signals would keep on singing. All you would hear is the drum reverb (the "wet"), and none of the original drum signals (the "dry"). That's because the reverb is being fed by the channel's AUX sends, and they have no idea that you've pulled down the SUBGROUP FADERS. That's why we threw in these switches.

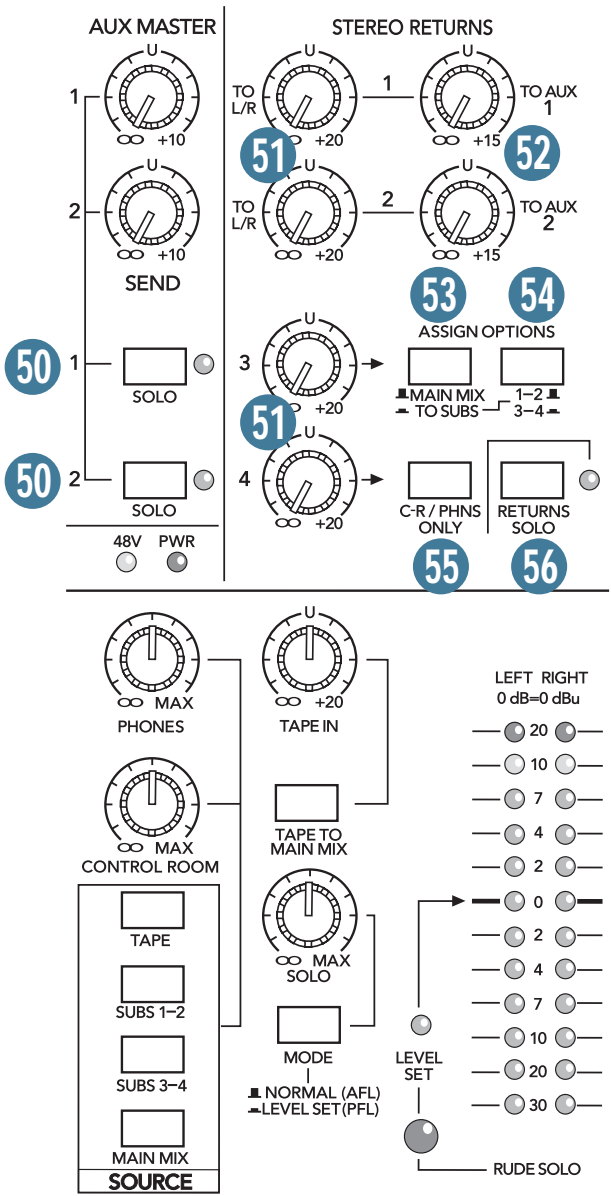

55. C-R/PHNS ONLY (for RETURN 4)

Once again, the default for all the STEREO RETURNS [7] is to feed them directly into the main mix. You've just learned about the optional exceptions involving STEREO RETURN 3. Not wanting to be left out, STEREO RETURN 4 also has an optional exception: By engaging this C-R/PHNS switch, you will remove STEREO RETURN 4's stereo signal from the main mix and send it directly to the CTL ROOM/PHONES SOURCE [42] matrix. It matters not if any of the SOURCE matrix switches are assigned, but it will be interrupted, as usual, if a SOLO switch is engaged.

Let's pretend you're doing a live mix to a 2-track deck, a house PA, or both, and you want to play along to a click track. You could run the click track directly into the main mix, but you don't want the mixdown deck and/or audience to hear it. By gum, this is the switch for you. Similarly, it can be used for voice-over tracks, narration, anything you want heard by the engineer and players but not by the audience and mixdown deck.

56. RETURNS SOLO

This switch operates just like the channel SOLO [27] switches — engaging it sends signals to the control room, headphones, and meters, and interrupts whatever happened to be there before you soloed. It follows the MODE [44] switch setting as well. The only difference is that when you engage this RETURNS SOLO switch, it sends all four STEREO RETURNS signals to the SOLO circuit.

Assume you want to solo the snare drum. Hit that channel's SOLO switch, and you get the "dry" (no effects) snare only. That helps, but you want to hear it with the reverb you have patched into a STEREO RETURN. Leaving that channel's SOLO switch engaged, also engage the RETURNS SOLO switch, and now you'll get the dry snare and its reverb.

Since it is a global feature, you'll also get the signals from all the other STEREO RETURNS, so there may be some sounds that you didn't want to hear. If they offend your sensibilities, simply turn down the STEREO RETURNS LEVELS [51] you don't want to hear, or MUTE [30] the channels feeding the unwanted signal to the effects device you do want to hear.

Congratulations! You've just read about all the features of your 1642-VLZ3. You're probably ready for a nice cup of tea. Go ahead. The rest of the manual can wait.

Appendix A: Service Information

Warranty Service

Details concerning the Limited Warranty are spelled out on page 31 of this manual.

If you think your 1642-VLZ3 has a problem, please check out the following troubleshooting tips and do your best to confirm the problem. Visit the Support section of our website (www.mackie.com) where you will find lots of useful information such as FAQs, documentation and user forums. You may find the answer to the problem without having to send your mixer away.

Troubleshooting

Bad Channel

- Are the channels assigned to the correct mix (1-2, 3-4, L-R)?
- Is the fader up?
- Try unplugging any insert devices from the INSERT [4] jacks.
- Try the same source signal in another channel, set up exactly like the suspect channel.

Bad Output

- Is the level control (if any) turned up?
- If you're listening to the C-R OUTS [9] or PHONES [10] outputs, has a SOURCE selection been made?
- If it's one of the MAIN OUTS [14], try unplugging its companion. For example, if it's the 1/4" output, unplug the RCA output. If the problem goes away, it's not the mixer.
- If it's a stereo pair, try switching them around. For example, if a left output is presumed dead, switch the left and right cords, at the mixer end. If the left is still dead, it's not the mixer.
- Unplug everything from the MAIN INSERT [13].

Noise

- Turn the channel faders and STEREO RETURN knobs down, one by one. If the sound disappears, it's either that channel or whatever is plugged into it, so unplug whatever that is. If the noise disappears, it's from your whatever.

Power

- Unplug the power cord and check the fuse.

Repair

Service for Mackie products is available at a factory-authorized service center. Service for Mackie products living outside the United States can be obtained through local dealers or distributors.

If your 1642-VLZ3 needs service, follow these instructions:

1. Review the preceding troubleshooting suggestions. Please.
2. Call Tech Support at 1-800-898-3211, 7 am to 5 pm PST, to explain the problem and request a Service Request Number. Have your serial number ready. You must have an Service Request Number before you can obtain warranty service.
3. Keep this owner's manual and the detachable line-cord. We don't need them to repair the unit.
4. Pack the unit in its original package, including end-caps and box. This is VERY IMPORTANT. Mackie is not responsible for any damage that occurs due to non-factory packaging.
5. Include a legible note stating your name, shipping address (no P.O. boxes), daytime phone number, a copy of your receipt, Service Request Number, and a detailed description of the problem, including how we can duplicate it.
6. Write the Service Request Number in BIG PRINT on top of the box. Units sent without the SR number will be refused.
7. Tech Support will tell you where to ship the unit for repair. We suggest insurance for all forms of cartage.
8. You will need to contact the authorized service center for their latest turn-around times. The unit should be packaged in its original packing box, and must have the Service Request Number on the box. Once it's repaired, the authorized service center will ship it back by ground shipping, pre-paid (if it was a warranty repair).

Note: Under the terms of the warranty, you must ship or drop-off the unit to an authorized service center. The return ground shipment is covered for those units deemed by us to be under warranty.

Note: You must have a sales receipt from an authorized Mackie dealer for your unit to be considered for warranty repair.

Appendix B: Connections

“XLR” Connectors

Mackie mixers use 3-pin female “XLR” connectors on all microphone inputs, with pin 1 wired to the grounded (earthed) shield, pin 2 wired to the “high” (“hot” or positive polarity) side of the audio signal and pin 3 wired to the “low” (“cold” or negative polarity) side of the signal. See Figure A. This is all totally aboveboard and in full accord with the hallowed standards dictated by the AES (Audio Engineering Society).

Use a male “XLR”-type connector, usually found on the nether end of what is called a “mic cable,” to connect to a female XLR jack.

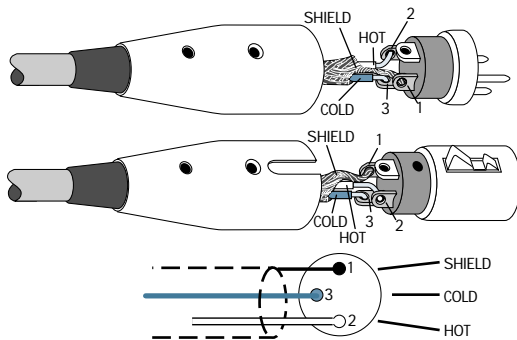


Figure A: XLR Connectors

1/4" TRS Phone Plugs and Jacks

“TRS” stands for Tip-Ring-Sleeve, the three connections available on a “stereo” 1/4" or “balanced” phone jack or plug. See Figure B.

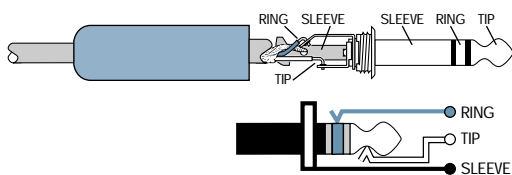


Figure B: " TRS Plugs

TRS jacks and plugs are used in several different applications:

- Stereo Headphones, and rarely, stereo microphones and stereo line connections. When wired for stereo, a 1/4" TRS jack or plug is connected tip to left, ring to right and sleeve to ground (earth). Mackie mixers do not directly accept 1-plug-type stereo microphones. They must be separated into a left cord and a right cord, which are plugged into the two mic preamps.

You can cook up your own adapter for a stereo microphone adapter. “Y” two cables out of a female 1/4" TRS jack to two male XLR plugs, one for the Right signal and one for the Left.

- Balanced mono circuits. When wired as a balanced connector, a 1/4" TRS jack or plug is connected tip to signal high (hot), ring to signal low (cold), and sleeve to ground (earth).
- Unbalanced Send/Return circuits. When wired as send/return “Y” connector, a 1/4" TRS jack or plug is connected tip to signal send (output from mixer), ring to signal return (input back into mixer), and sleeve to ground (earth).

1/4" TS Phone Plugs and Jacks

“TS” stands for Tip-Sleeve, the two connections available on a “mono” 1/4" phone jack or plug. See Figure C.

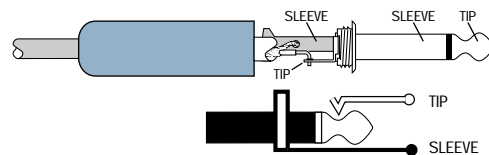


Figure C: TS Plug

TS jacks and plugs are used in many different applications, always unbalanced. The tip is connected to the audio signal and the sleeve to ground (earth). Some examples:

- Unbalanced microphones
- Electric guitars and electronic instruments
- Unbalanced line-level connections

Switched 1/4" Phone Jacks

Switches can be incorporated into 1/4" phone jacks, which are activated by inserting the plug. These switches may open an insert loop in a circuit, change the input routing of the signal or serve other functions. Mackie uses switches in the channel insert and bus insert jacks, input jacks and AUX returns. We also use these switches to ground the line-level inputs when nothing is plugged into them.

In most cases, the plug must be inserted fully to activate the switch. Mackie takes advantage of this in some circuits, specifying circumstances where you are to insert the plug only partially. See Special Mackie Connections, on the next page.

RCA Plugs and Jacks

RCA-type plugs (also known as phono plugs) and jacks are often used in home stereo and video equipment and in many other applications (Figure D). They are unbalanced and electrically identical to a 1/4" TS phone plug or jack. See Figure C. Connect the signal to the center post and the ground (earth) or shield to the surrounding "basket."




Figure D: RCA Plug

Unbalancing a Line

In most studio, stage and sound reinforcement situations, there is a combination of balanced and unbalanced inputs and outputs on the various pieces of equipment. This usually will not be a problem in making connections.

- When connecting a balanced output to an unbalanced input, be sure the signal high (hot) connections are wired to each other, and that the balanced signal low (cold) goes to the ground (earth) connection at the unbalanced input. In most cases, the balanced ground (earth) will also be connected to the ground (earth) at the unbalanced input. If there are ground-loop problems, this connection may be left disconnected at the balanced end.
- When connecting an unbalanced output to a balanced input, be sure that the signal high (hot) connections are wired to each other. The unbalanced ground (earth) connection should be wired to the low (cold) and the ground (earth) connections of the balanced input. If there are ground-loop problems, try connecting the unbalanced ground (earth) connection only to the input low (cold) connection, and leaving the input ground (earth) connection disconnected.
- In some cases, you will have to make up special adapters to interconnect your equipment. For example, you may need a balanced XLR female connected to an unbalanced 1/4" TS phone plug.

Special Mackie Connections

The balanced-to-unbalanced connection has been anticipated in the wiring of Mackie jacks. A 1/4" TS plug inserted into a 1/4" TRS balanced input, for example, will automatically unbalance the input and make all the right connections. Conversely, a 1/4" TRS plug inserted into a 1/4" unbalanced input will automatically tie the ring (low or cold) to ground (earth).

TRS Send/Receive Insert Jacks

Mackie's single-jack inserts are the three-conductor, TRS-type 1/4" phone. They are unbalanced, but have both the mixer output (send) and the mixer input (return) signals in one connector. See Figure E.

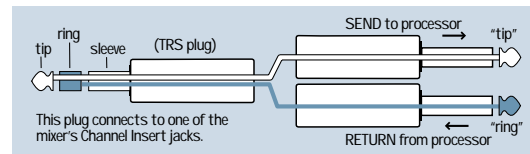


Figure E

The sleeve is the common ground (earth) for both signals. The send from the mixer to the external unit is carried on the tip, and the return from the unit to the mixer is on the ring.

Using the Send Only on an Insert Jack

If you insert a TS (mono) 1/4" plug only partially (to the first click) into a Mackie insert jack, the plug will not activate the jack switch and will not open the insert loop in the circuit (thereby allowing the channel signal to continue on its merry way through the mixer).

This allows you to tap out the channel or bus signal without interrupting normal operation.

If you push the 1/4" TS plug in to the second click, you will open the jack switch and create a direct out, which does interrupt the signal in that channel. See Figure F on the next page.

NOTE: Do not overload or short-circuit the signal you are tapping from the mixer. That will affect the internal signal.

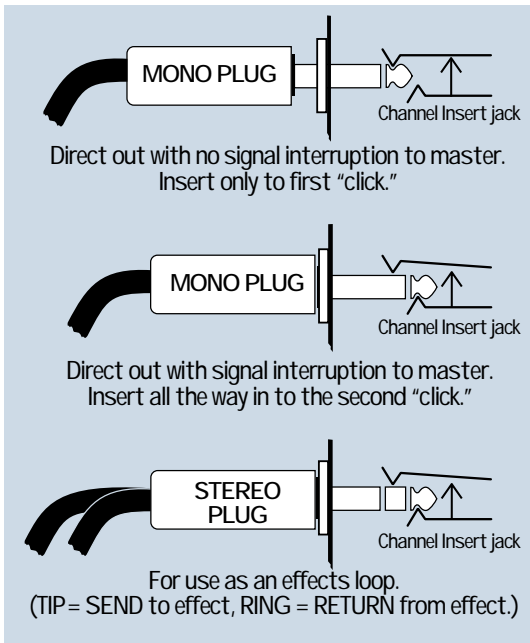


Figure F

Mackie Stereo Inputs and Returns: Mono, Stereo, Whatever

Stereo line inputs and stereo returns are a fine example of the Mackie philosophy (which we just made up) of Maximum Flexibility with Minimum Headache. The inputs and returns will automatically be mono or stereo, depending upon how you use the jacks. Here's how it works:

A mono signal should be patched into the input or return jack labeled Left (MONO). The signal will be routed to both the left and right sides of the return circuit, and will show up in the center of the stereo pair of buses it's assigned to, or it can be panned with the PAN control.

A stereo signal, having two plugs, should be patched into the LEFT (MONO) and the RIGHT input or return jacks. A jack switch in the RIGHT jack will disable the mono function, and the signals will show up in stereo.


A mono signal connected to the RIGHT jack will show up in the right bus only. You probably will only want to use this sophisticated effect for special occasions.

Mults and "Y"s

A mult or "Y" connector allows you to route one output to two or more inputs by simply providing parallel wiring connections. You can make "Y"s and mults for the outputs of both unbalanced and balanced circuits.



Remember: Only mult or "Y" one output into several inputs. If you need to combine several outputs into one input, you must use a mixer, not a mult or a "Y."

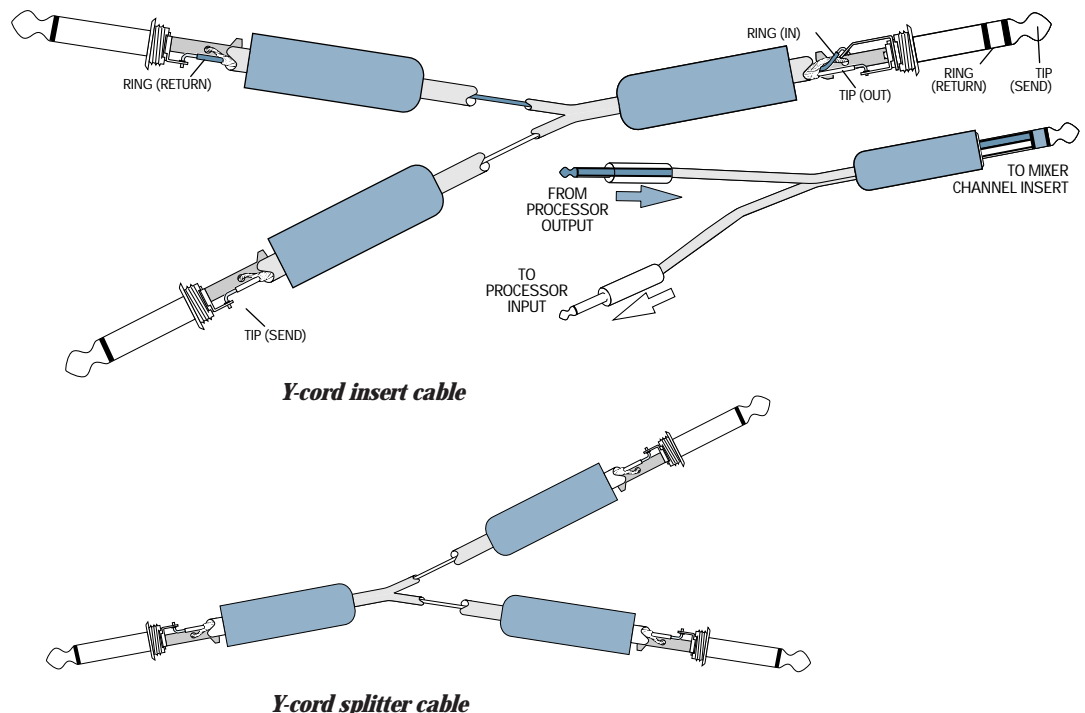

Appendix C: Technical Information

Specifications

Main Mix Noise

(20 Hz–20 kHz bandwidth, 1/4" Main out, channel gains @ unity gain, channel EQs flat, all channels assigned to Main Mix, odd channels panned left, even channels panned right.)

Main Mix fader unity, channel faders down: -86.5 dBu
(90 dB Signal to Noise Ratio, ref +4 dBu)

Main Mix fader unity, channel faders @ unity: -86 dBu

Total Harmonic Distortion (THD)

(1 kHz 35 dB gain, 20 Hz–20 kHz bandwidth)

Mic in to insert out: <0.0007%

Attenuation (Crosstalk)

(1 kHz relative to 0 dBu, 20 Hz–20 kHz bandwidth, Line in, 1/4" Main Out, Gain @ unity.)

Channel Mute switch engaged: -82 dBu

Channel Gain knob down: -82 dBu

Frequency Response

(Mic input to any output.)

20 Hz to 40 kHz: +0 dB/-1 dB

20 Hz to 60 kHz: +0 dB/-3 dB

Equivalent Input Noise (EIN)

(Mic in to Insert Send out, max gain.)

150 ohm termination: -129.5 dBu 20 Hz–20 kHz

Common Mode Rejection Ratio (CMRR)

(Mic in to Insert Send out, max gain.)

1 kHz: better than -70 dB

Maximum Levels

Mic in: +22 dBu

All other inputs: +22 dBu

Main Mix TRS out and XLR out: +28 dBu

All other outputs: +22 dBu

Impedances

Mic in: 2.5 kilohms

Channel Insert return: 2.5 kilohms

All other inputs: 10 kilohms or greater

Tape out: 1.1 kilohms

All other outputs: 120 ohms

3 Band EQ (channels 1 – 8)

High Shelving ±15 dB @ 12 kHz

Mid Peaking ±15 dB sweep 100 Hz–8 kHz

Low Shelving ±15 dB @ 80 Hz

Low Cut Filter 18 dB/octave, -3 dB @ 75 Hz

4 Band EQ (channels 9 – 16)

High Shelving ±15 dB @ 12 kHz

Hi Mid Peaking ±15 dB @ 2.5 kHz

Low Mid Peaking ±15 dB @ 400 Hz

Low Shelving ±15 dB @ 80 Hz

Low Cut Filter (Ch.9–12) 18 dB/octave, -3 dB @ 75 Hz

Power Consumption

120 VAC, 50/60 Hz, 50 watts

Fuse Ratings

100–120 VAC 1A Slo Blo, 5 x 20 mm

220–240 VAC 0.5A Slo Blo, 5 x 20 mm

Dimensions (H x W x D) in Normal Pod Position

16.7" x 16.6" x 5.2" (425 mm x 421 mm x 131 mm)

Weight


18.2 lb (8.3 kg)

LOUD Technologies Inc. is always striving to improve our products by incorporating new and improved materials, components, and manufacturing methods. Therefore, we reserve the right to change these specifications at any time without notice.


"Mackie," and the "Running Man" are registered trademarks of LOUD Technologies Inc. All other brand names mentioned are trademarks or registered trademarks of their respective holders, and are hereby acknowledged.

Please check our website for any updates to this manual: www.mackie.com.

©2007 LOUD Technologies Inc. All Rights Reserved.

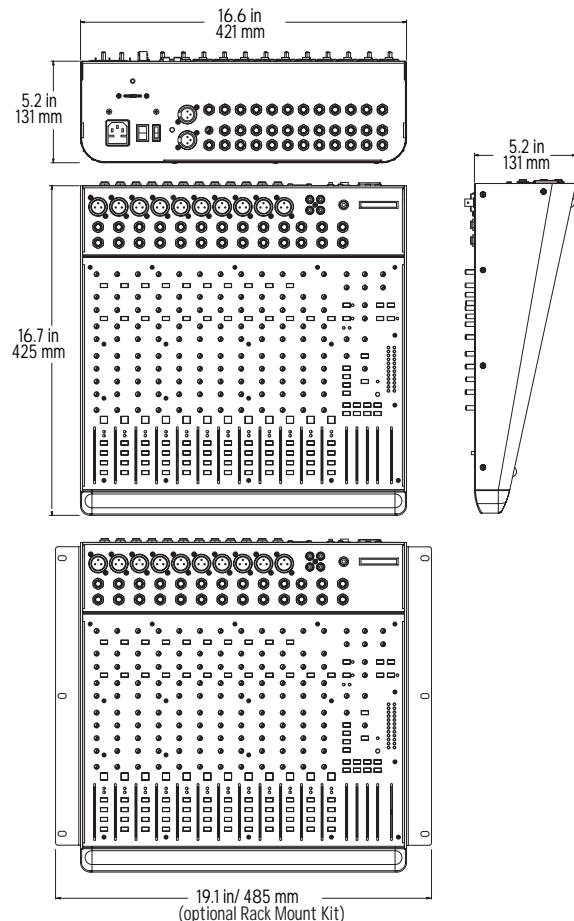

Block Diagram

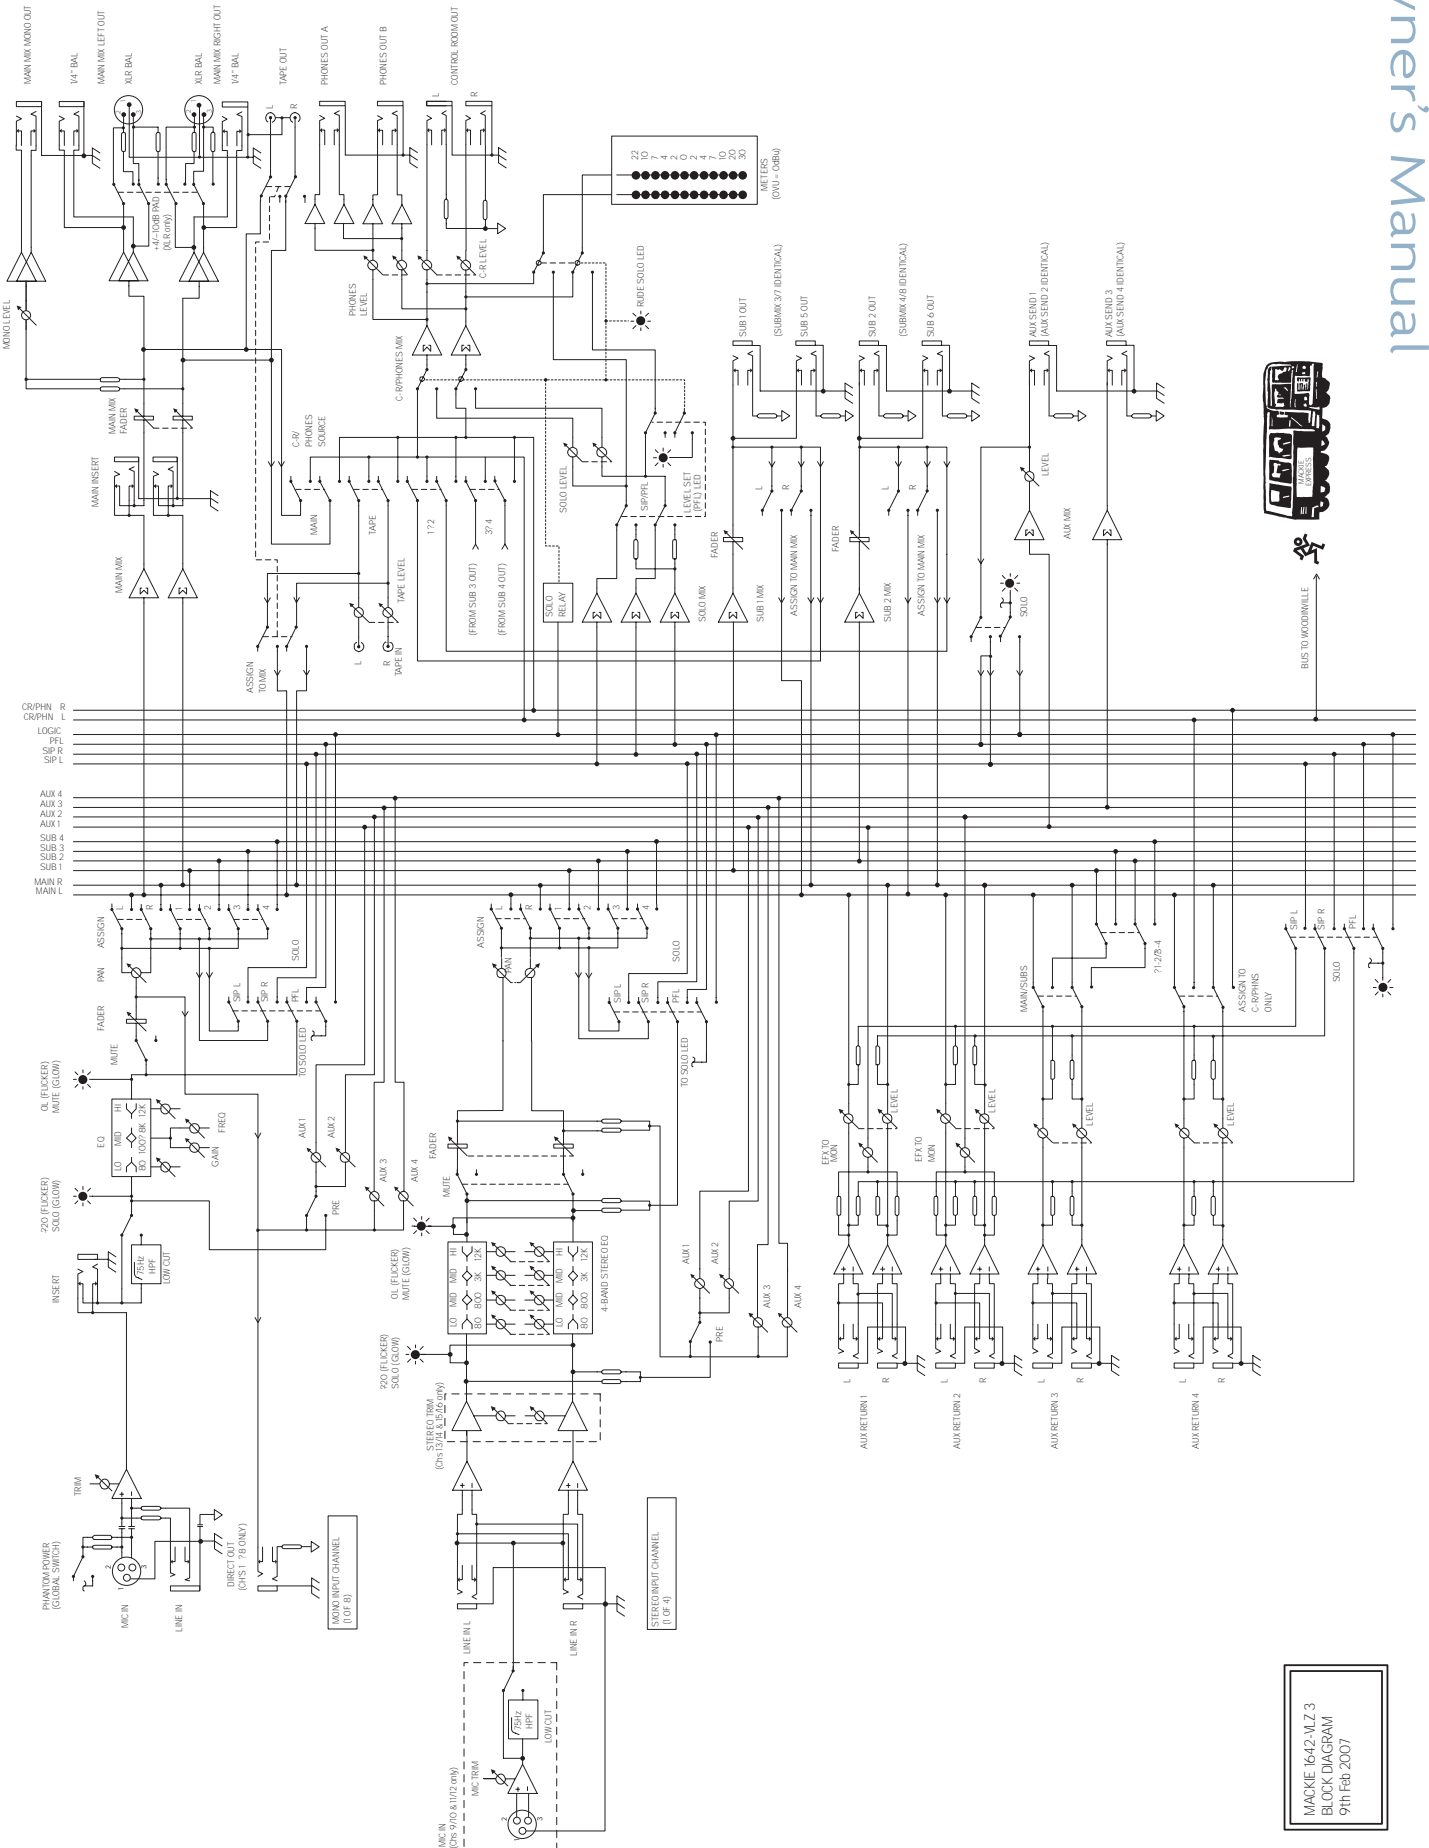

BUS TO WOODBRIDGE

Macke 1642-VL3
Block Diagram
9th Feb 2007

Session: _____

Date: _____

Notes: _____

The diagram illustrates a 16-track audio mixer control panel. At the top, there are stereo returns (1-2) and aux master controls (1-2) with gain knobs and switches. Below these are assign options for aux returns (1-4) and a source selector with buttons for TAPE, MAIN MIX, SUBS 1-2, SUBS 3-4, and MAIN MIX. The main mixer section consists of 16 tracks, each with a gain knob (0 to +20 dB), a low-cut filter (100 Hz to 1800 Hz), an auxiliary send section (4 knobs), an EQ section (HI 12k, MID 2.5k, LOW 80Hz), a pan knob (L, R), and a mute/solo section (mute button, solo knob). The bottom right features the main mix section with level meters (0 to 40 dB) and solo buttons for each track. The panel is labeled with various controls like 'ASSIGN TO MAIN MIX', 'LEFT RIGHT', 'TAPE IN', 'CONTROL ROOM', 'PHONES', 'LEVEL SET', 'MODE', 'NORMAL (AFL)', and 'RIDE SOLO'.

1642-VLZ3 Limited Warranty

Please keep your sales receipt in a safe place.

A. LOUD Technologies Inc. warrants all materials, workmanship and proper operation of this product for a period of three years from the original date of purchase. If any defects are found in the materials or workmanship or if the product fails to function properly during the applicable warranty period, LOUD Technologies, at its option, will repair or replace the product. This warranty applies only to equipment sold and delivered within the U.S. by LOUD Technologies Inc. or its authorized dealers.

B. Failure to register online or return the product registration card will not void the three-year warranty.

C. Service and repairs of Mackie products are to be performed only at a factory-authorized facility (see D below). Unauthorized service, repairs, or modification will void this warranty. To obtain repairs under warranty, you must have a copy of your sales receipt from the authorized Mackie dealer where you purchased the product. It is necessary to establish the purchase date and determine whether your Mackie product is within the warranty period.

D. To obtain factory-authorized service:

1. Call Mackie Technical Support at 800/898-3211, 7 AM to 5 PM Monday through Friday (Pacific Time) to get a Service Request Number. Products returned without a Service Request Number will be refused.
2. Pack the product in its original shipping carton. Also include a note explaining exactly how to duplicate the problem, a copy of the sales receipt with price and date showing, and your return street address (no P.O. boxes or route numbers, please!). If we cannot duplicate the problem or establish the starting date of your Limited Warranty, we may, at our option, charge for service time.
3. Ship the product in its original shipping carton, freight prepaid to the authorized service center. The address of your closest authorized service center will be given to you by Technical Support.

IMPORTANT: Make sure that the Service Request Number is plainly written on the shipping carton.

No receipt: no warranty service.

E. LOUD Technologies reserves the right to inspect any products that may be the subject of any warranty claims before repair or replacement is carried out. LOUD Technologies may, at our option, require proof of the original date of purchase in the form of a dated copy of the original dealer's invoice or sales receipt. Final determination of warranty coverage lies solely with LOUD Technologies.

F. Any products returned to one of the LOUD Technologies factory-authorized service centers, and deemed eligible for repair or replacement under the terms of this warranty will be repaired or replaced within thirty days of receipt. LOUD Technologies and its authorized service centers may use refurbished parts for repair or replacement of any product. Products returned to LOUD Technologies that do not meet the terms of this Warranty will not be repaired unless payment is received for labor, materials, return freight, and insurance. Products repaired under warranty will be returned freight prepaid by LOUD Technologies to any location within the boundaries of the USA.

G. LOUD Technologies warrants all repairs performed for 90 days or for the remainder of the warranty period. This warranty does not extend to damage resulting from improper installation, misuse, neglect or abuse, or to exterior appearance. This warranty is recognized only if the inspection seals and serial number on the unit have not been defaced or removed.

H. LOUD Technologies assumes no responsibility for the quality or timeliness of repairs performed by an authorized service center.

I. This warranty is extended to the original purchaser and to anyone who may subsequently purchase this product within the applicable warranty period. A copy of the original sales receipt is required to obtain warranty repairs.

J. This is your sole warranty. LOUD Technologies does not authorize any third party, including any dealer or sales representative, to assume any liability on behalf of LOUD Technologies or to make any warranty for LOUD Technologies Inc.

K. THE WARRANTY GIVEN ON THIS PAGE IS THE SOLE WARRANTY GIVEN BY LOUD TECHNOLOGIES INC. AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS AND IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE WARRANTY GIVEN ON THIS PAGE SHALL BE STRICTLY LIMITED IN DURATION TO THREE YEARS FROM THE DATE OF ORIGINAL PURCHASE FROM AN AUTHORIZED MACKIE DEALER. UPON EXPIRATION OF THE APPLICABLE WARRANTY PERIOD, LOUD TECHNOLOGIES INC. SHALL HAVE NO FURTHER WARRANTY OBLIGATION OF ANY KIND. LOUD TECHNOLOGIES INC. SHALL NOT BE LIABLE FOR ANY INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES THAT MAY RESULT FROM ANY DEFECT IN THE MACKIE PRODUCT OR ANY WARRANTY CLAIM. Some states do not allow exclusion or limitation of incidental, special, or consequential damages or a limitation on how long warranties last, so some of the above limitations and exclusions may not apply to you. This warranty provides specific legal rights and you may have other rights which vary from state to state.

MACKIE®

16220 Wood-Red Road NE • Woodinville, WA 98072 • USA

United States and Canada: 800.898.3211

Europe, Asia, Central and South America: 425.487.4333

Middle East and Africa: 31.20.654.4000

Fax: 425.487.4337 • www.mackie.com

E-mail: sales@mackie.com